

Dell Docking Station WD19 Dual Cable

User Guide

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Introduction.....	4
Chapter 2: Package contents	5
Chapter 3: Hardware requirements.....	7
Chapter 4: Identifying Parts and Features	8
Chapter 5: Important Information.....	12
Chapter 6: Quick Setup of Hardware	13
Graphic special mode for Dell Precision 7000 series.....	16
Chapter 7: Setup of External Monitors.....	17
Updating the graphics drivers for your computer.....	17
Configuring your Monitors.....	17
Display bandwidth.....	18
Display Resolution Table.....	18
Chapter 8: Removing the USB Type-C cable module	20
Chapter 9: Technical specifications.....	24
LED Status Indicators.....	24
Power Adapter LED.....	24
Cable LED.....	24
Docking Status Indicator.....	24
Docking specifications.....	25
Input/Output (I/O) Connectors.....	25
Dell ExpressCharge and ExpressCharge boost overview.....	26
Chapter 10: Dell docking station firmware update	27
Chapter 11: Frequently asked questions.....	30
Chapter 12: Troubleshooting the Dell Performance Docking Station WD19DC	32
Symptoms and solutions.....	32
Chapter 13: Getting help.....	36
Contacting Dell.....	36

Introduction

The Dell Performance Docking Station WD19DC is a device that links all your electronic devices to your system using a dual USB Type-C cable interface. Connecting the system to the docking station allows you to access all peripherals (mouse, keyboard, stereo speakers, external hard drive, and large-screen displays) without having to plug each one into the system.

 **CAUTION:** Update your system's BIOS, graphic drivers and the Dell Performance Docking Station WD19DC drivers to the latest versions available at www.dell.com/support BEFORE using the docking station. Older BIOS versions and drivers could result your system not recognizing the docking station or not functioning optimally. Always check if any recommended firmware is available for your docking station at www.dell.com/support.

Package contents

Your docking station ships with the components shown below. Ensure that you have received all the components and contact Dell (see your invoice for contact information) if something is missing.

Table 1. Package contents

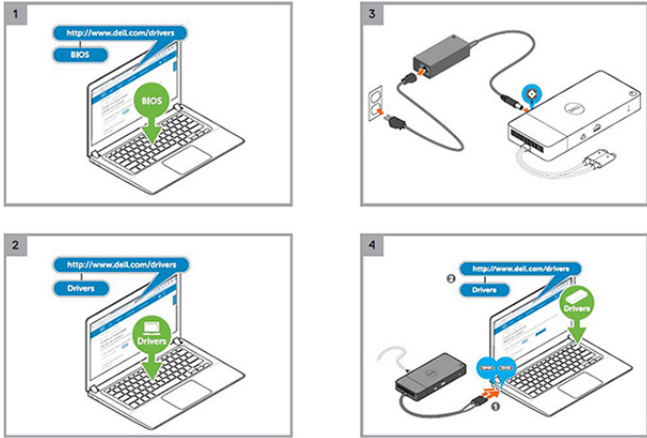
Contents	Specifications
 1 2 3	1. Docking station with USB Type-C cable 2. Power adapter 3. Power cord
Dell Performance Dock WD19DC Quick Start Guide Important You must update your computer's BIOS and the Dell Performance Dock WD19DC drivers to the latest versions available at www.dell.com/support before using the Dock. Older BIOS versions and drivers could result in the Dell Performance Dock WD19DC not being recognized by your computer or not functioning optimally. For more information, please refer to the User Guide.  1 2 3 4	Quick Setup Guide (QSG)

Table 1. Package contents (continued)

[illegible]

Hardware requirements

Before using the docking station, ensure that your system has a DisplayPort over dual USB Type-C designed to support the docking station.

 **NOTE:** Dell Docking stations are supported with select Dell systems. See the [Dell Commercial Docking Compatibility Guide](#) for the list of supported systems and recommended docking.

Identifying Parts and Features

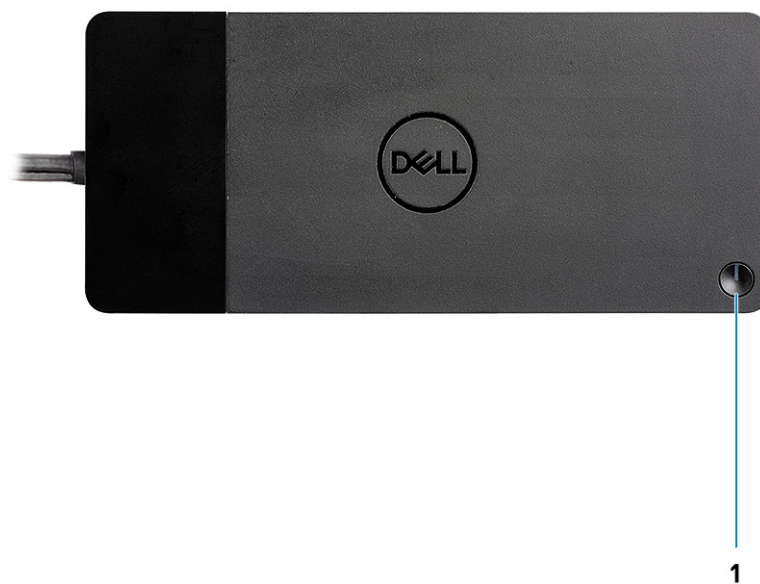


Figure 1. Top view



1. Sleep/Wake up/Power button

NOTE: The dock button is designed to replicate your system's power button. If you connect the Dell Performance Docking Station WD19DC to supported Dell computers, the dock button works like your computer's power button and you can use it to power on/sleep/force shutdown the computer.

NOTE: The dock button is not functional when connected to unsupported Dell computers or non-Dell computers.

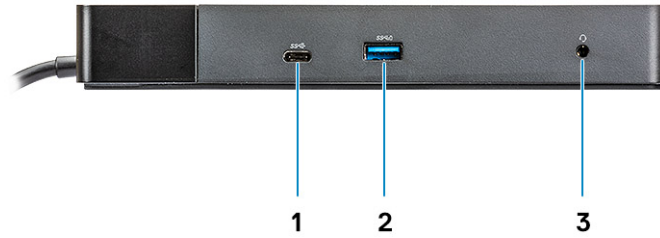


Figure 2. Front view

1.  USB 3.1 Gen1/Gen2 Type-C port
2.  USB 3.1 Gen1 port with PowerShare
3.  Audio headset port

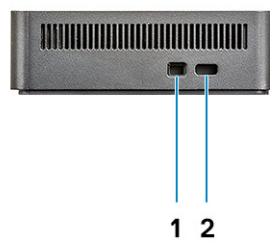


Figure 3. Left view

1.  Wedge-shaped lock slot



2. Kensington lock slot

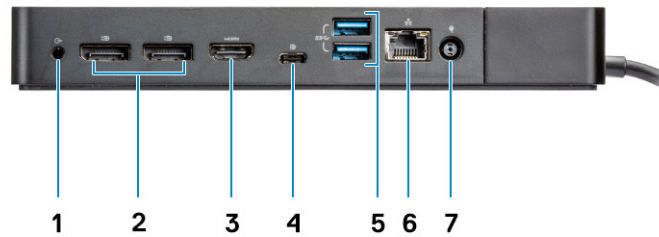


Figure 4. Back view



1. Line-out port



2. DisplayPort 1.4 (2)



3. HDMI2.0 port



4. USB 3.1 Gen1/Gen2 Type-C port with DisplayPort 1.4



5. USB 3.1 Gen1 port (2)



6. Network connector (RJ-45)



7. Power connector



Figure 5. Bottom view

1. Service tag label

Important Information

Dell Docking Station drivers (Realtek USB GBE Ethernet Controller Driver and Realtek USB Audio Driver) are required to be installed before using the docking station for full functionality. Dell recommends updating the system BIOS and graphics driver system BIOS, graphics driver, Thunderbolt driver, and Thunderbolt firmware to the latest version before using the docking station. Older BIOS versions and drivers could result in the docking station not being recognized by your system or not functioning optimally.

Dell highly recommends the following applications to automate the installation of BIOS, firmware, driver, and critical updates specific to your system and docking station:

- Dell | Update - for Dell XPS systems only.
- Dell Command | Update - for Dell Latitude, Dell Precision, or XPS systems.

These applications are available for download on the Drivers & Downloads page for your product at [Dell Support Site](#)

Updating the Dell Docking Station WD19DC driver set

To fully support the new generation Dell Docking Station WD19DC, it is highly recommended to install the following BIOS/Drivers on a 64-bit Windows operating system:

1. Go to [Dell Support Site](#) and click **Detect Product** to Autodefect your product, or enter your system's Service Tag in the **Enter a Service Tag or Express Service Code** field, or click **View Products** to browse to your system model.
2. Flash the latest BIOS available for the system. This is available for download at [dell.com/support](#) under the "**BIOS**" section. Restart the system before the next step.
3. Install the latest Intel HD/NVIDIA/AMD Graphics drivers available for the system. This is available for download at [Drivers at Dell Support Site](#). Restart the system before the next step.
4. Install the **Realtek USB GBE Ethernet Controller Driver for Dell Dock WD19DC** available for your system. This is available for download at [dell.com/support](#) under the "**Docks/Stand**" section.
5. Install the **Realtek USB Audio Driver for Dell Dock WD19DC** available for your system. This is available for download at [dell.com/support](#) under the "**Docks/Stands**" section.

Proper handling of the cables


To maintain the optimal performance and enhance the longevity of the cables, manage them carefully by following these guidelines:


1. Avoid sharp bends
 - Ensure that the cable is not bent at sharp angles, particularly near the connectors. Maintain a gentle curve to prevent undue strain on the internal wires.
2. Implement proper cable management
 - When organizing or storing the cable, avoid wrapping it too tightly. Instead, loosely coil the cable in wide loops to preserve its integrity.
3. Refrain from tugging or twisting
 - Avoid holding the cable while disconnecting it from any connector or while carrying the dock from one place to another. This practice prevents potential damage to the cable and connectors.
4. Store safely when not in use
 - When the docking station is not in use, store the dock and its cables in a manner that prevents compression and other forms of damage.

Quick Setup of Hardware

Steps

1. Update your system's BIOS, graphics and drivers from www.dell.com/support/drivers.

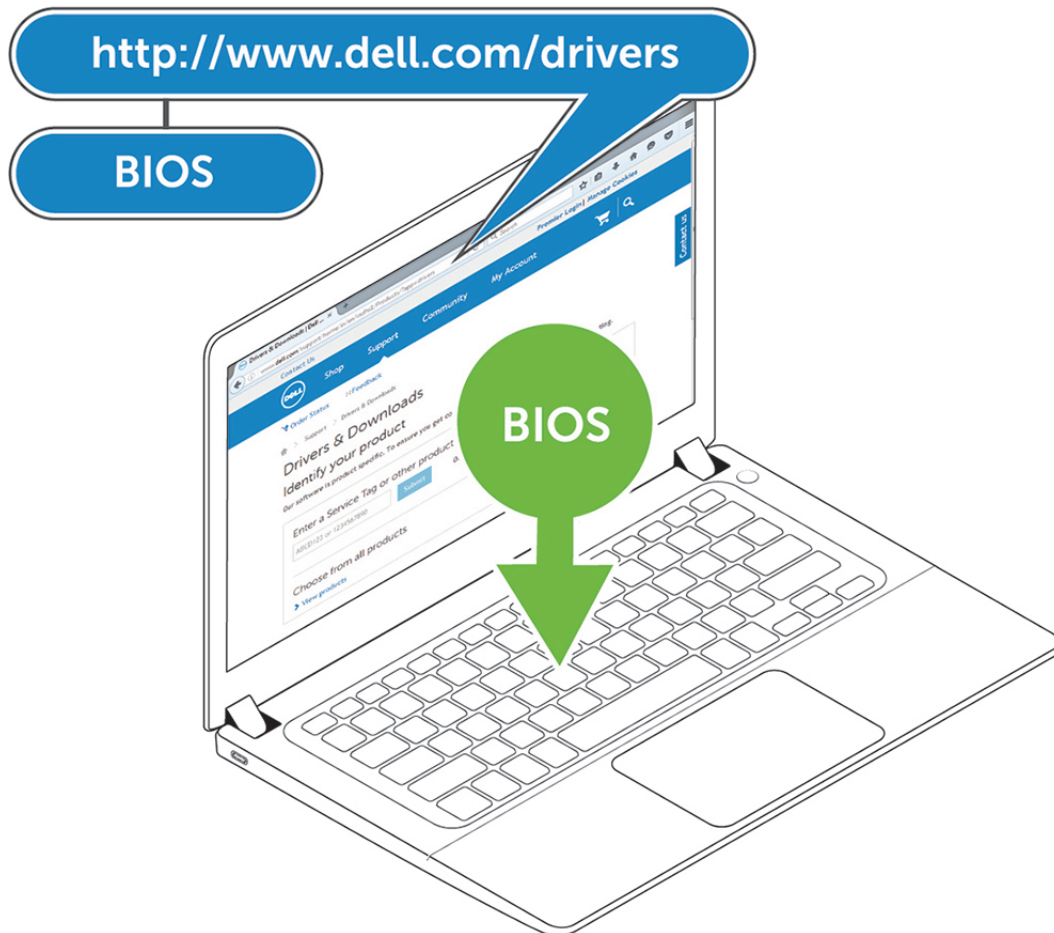

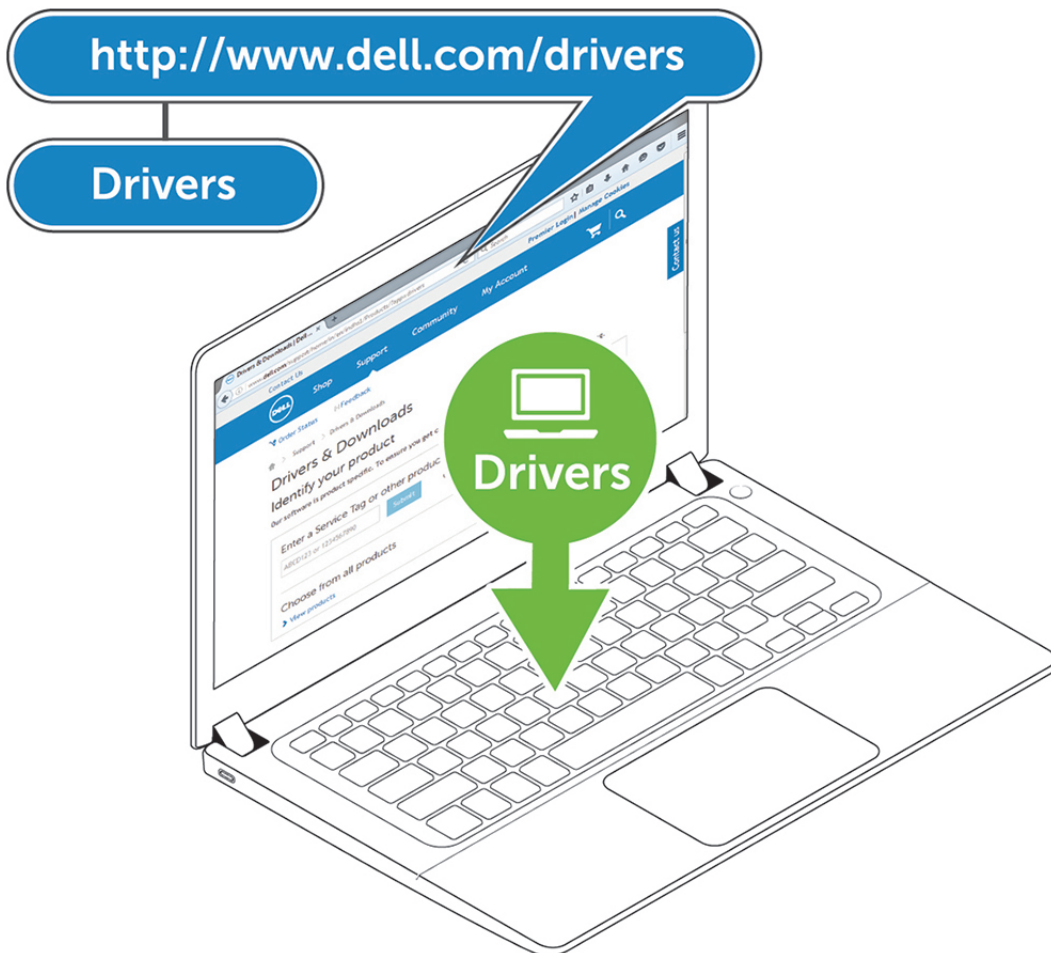

2. Connect the AC adapter to a power outlet. Then, connect the AC adapter to the 7.4 mm DC-in power input on the Dell Performance Docking Station WD19DC .

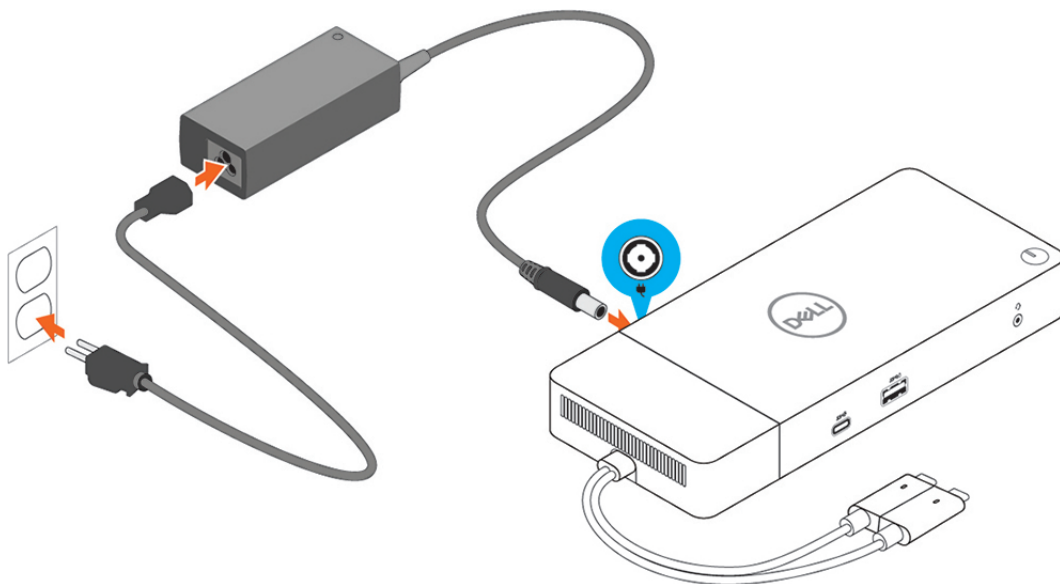


Figure 6. Connecting the AC Adapter

3. Connect the USB Type-C connector to the system.
Update the Dell Performance Docking Station WD19DC firmware from www.dell.com/support/drivers.

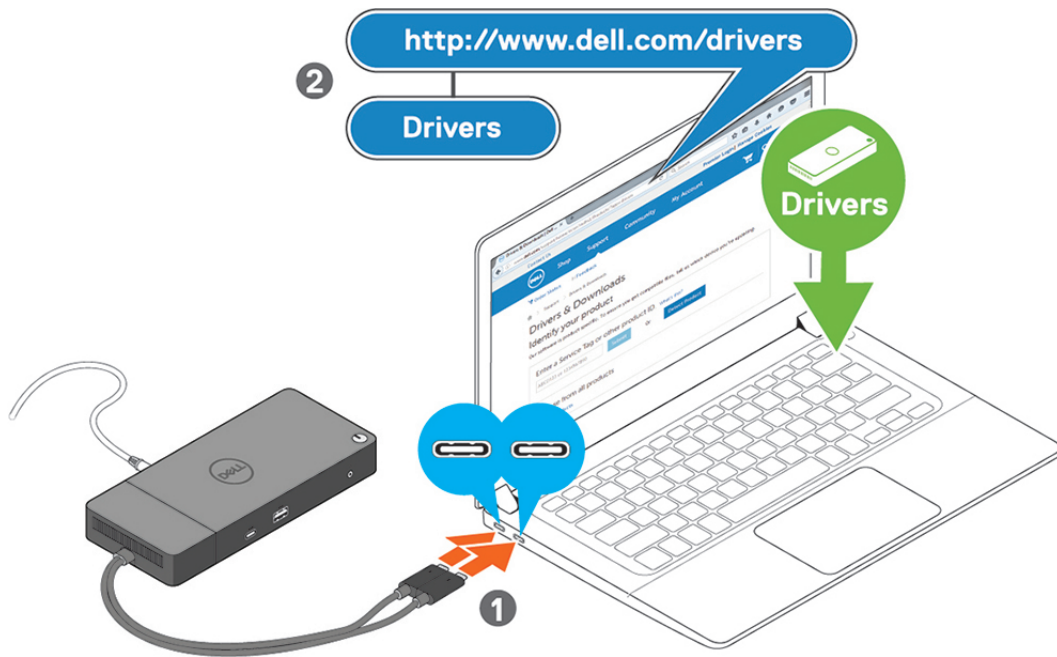


Figure 7. Connecting the dual USB Type-C connector

NOTE: On supported systems use a single USB Type-C cable to connect the docking station. The other USB Type-C cable of the docking station can only be used as a power deliverable cable for smartphone or tablet up to 15 W.

4. Connect multiple displays to the docking station, as needed.

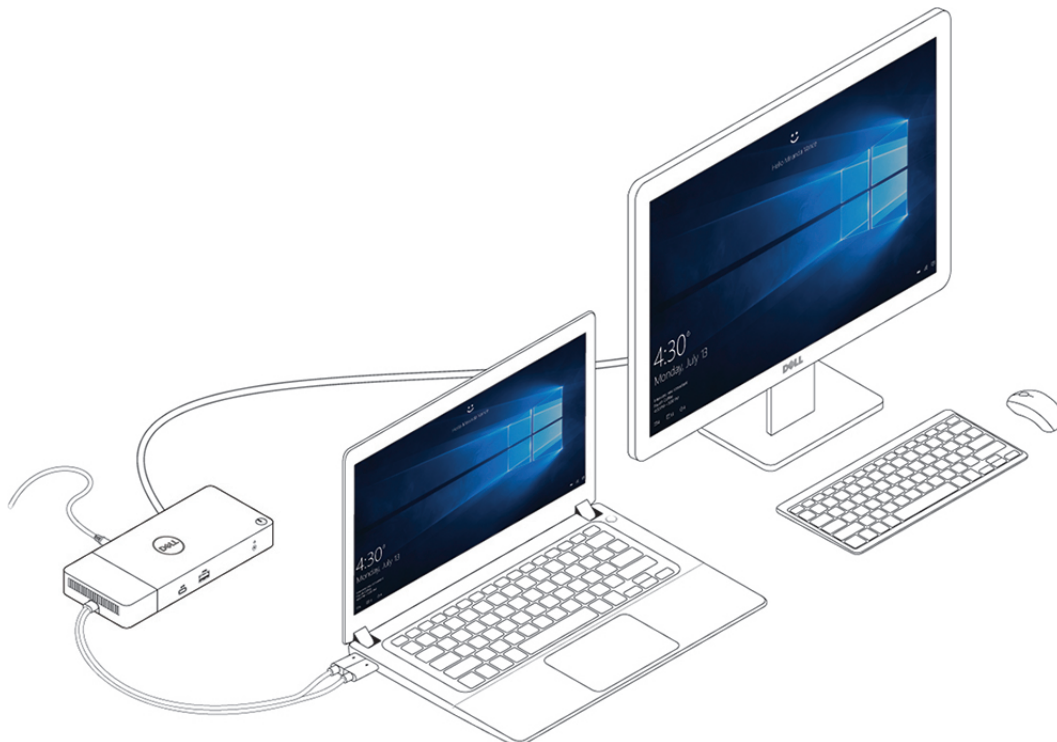



Figure 8. Connecting the multiple displays

Topics:

- [Graphic special mode for Dell Precision 7000 series](#)

Graphic special mode for Dell Precision 7000 series

- In the Dell Precision 7000 series, the discrete graphics card has been multiplexed to enable it to directly drive the laptops USB Type-C MDP ports.
- The option is available in the system BIOS under Video > Switchable Graphics.
- When enabled, this switches the display source of the display connectors so they are all sourced from the discrete GPU.

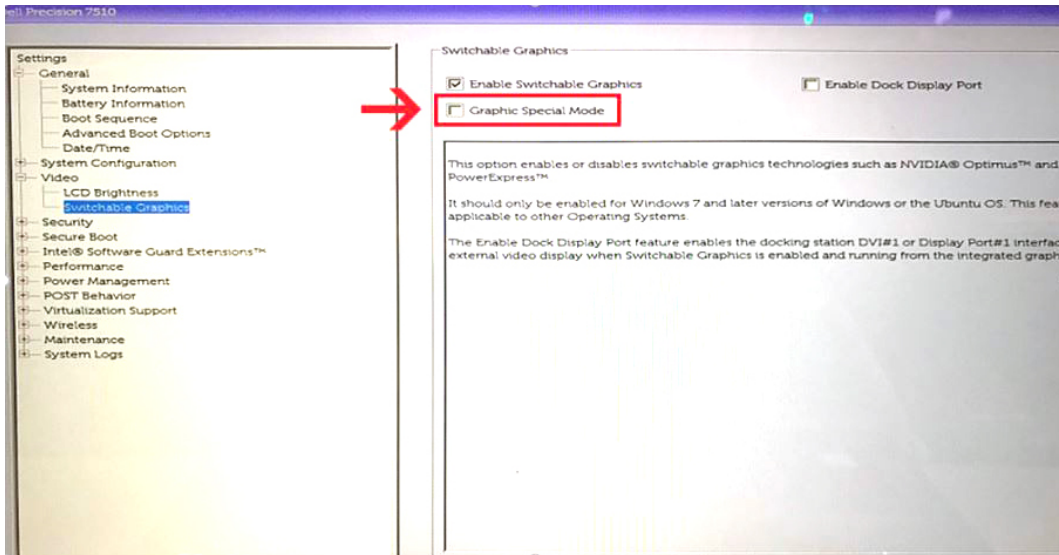

Setup of External Monitors

Topics:

- [Updating the graphics drivers for your computer](#)
- [Configuring your Monitors](#)
- [Display bandwidth](#)
- [Display Resolution Table](#)

Updating the graphics drivers for your computer

The Microsoft Windows operating systems include the VGA graphics drivers only. Therefore, for optimum graphics performance, it is recommended that Dell graphics drivers applicable for your computer be installed from dell.com/support under the “**Video**” section

NOTE:

1. For nVidia Discrete Graphics solutions on the supported Dell systems:
 - a. First, install the Intel Media Adapter Graphics Driver applicable to your computer.
 - b. Second, install the nVidia Discrete Graphics Driver applicable to your computer.
2. For AMD Discrete Graphics solutions on the supported Dell systems:
 - a. First, install the Intel Media Adapter Graphics driver applicable to your computer.
 - b. Second, install the AMD Discrete Graphics driver applicable to your computer.



Configuring your Monitors

If connecting two displays, follow these steps:

Steps

1. Click the **Start** button, and then select **Settings**.
2. Click **System** and select **Display**.

3. Under the **Multiplay displays** section, select **Extend these displays**.

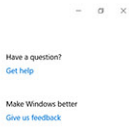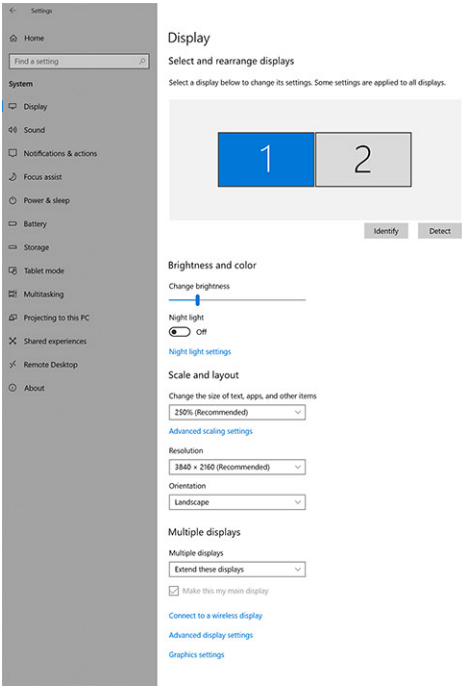

Display bandwidth

External monitors require a certain amount of bandwidth to work properly. Monitors with higher resolution require more bandwidth.

- DisplayPort High Bit Rate 2 (HBR2) is DP 1.2 (5.4 Gbps maximum link rate per lane). With DP overhead, the effective data rate is 4.3 Gbps per lane.
- DisplayPort High Bit Rate 3 (HBR3) is DP 1.4 (8.1 Gbps maximum link rate per lane). With DP overhead, the effective data rate is 6.5 Gbps per lane.

Table 2. Display bandwidth

Resolution	Minimum bandwidth required
1 x FHD (1920 x 1080) display @60 Hz	3.2 Gbps
1 x QHD (2560 x 1440) display @60 Hz	5.6 Gbps
1 x 4K (3840 x 2160) display @30 Hz	6.2 Gbps
1 x 4K (3840 x 2160) display @60 Hz	12.5 Gbps

Display Resolution Table

Only for Recommended Systems from [Dell Commercial Docking Compatibility Guide](#). The following table only addresses the dual-cable connection and does not support systems that use single Type-C cable.

Table 3. WD19DC

Display Port Available Bandwidth	Single Display (maximum resolution)	Dual Display (maximum resolution)	Triple Display (maximum resolution)	Quad Display (maximum resolution)
HBR2 (HBR2 x4 lanes - 17.2 Gbps)	DP1.4/HDMI2.0/MFDP Type-C:	• DP1.4 + DP1.4: QHD	• DP1.4 + DP1.4 + HDMI2.0:	N/A

Table 3. WD19DC (continued)

Display Port Available Bandwidth	Single Display (maximum resolution)	Dual Display (maximum resolution)	Triple Display (maximum resolution)	Quad Display (maximum resolution)
	4K (3840 x 2160) @60 Hz	(2560 x 1440) @60 Hz • DP1.4 + HDMI2.0: QHD (2560 x 1440) @60 Hz • DP1.4 + MFDP Type-C: QHD (2560 x 1440) @60 Hz	• 3 x QHD (2560 x 1440) @60 Hz • DP1.4 + DP1.4 + MFDP Type-C: • 3 x QHD (2560 x 1440) @60 Hz	
HBR3 (HBR3 x4 lanes - 25.9 Gbps) With discrete graphics card See recommended models in hardware requirements	DP1.4/HDMI2.0/ MFDP Type-C: 8K (7689x4320) @30 Hz	• DP1.4 + DP1.4: 4K (3840 x 2160) @60 Hz • DP1.4 + HDMI2.0: 4K (3840 x 2160) @60 Hz • DP1.4 + MFDP Type-C: 4K (3840 x 2160) @60 Hz	• DP1.4 + DP1.4 + HDMI2.0: QHD (2560 x 1440) @60 Hz • DP1.4 + DP1.4 + MFDP Type-C: QHD (2560 x 1440) @60 Hz	Using Daisy-chain: • DP1.4 (Daisy-chain 2 x QHD 2560 x 1440 @30 Hz) + DP1.4 + HDMI2.0: • QHD (2560 x 1440) @60 Hz • DP1.4 (Daisy-chain 2 x QHD 2560 x 1440 @30Hz) + DP1.4 + MFDP type-C: • QHD (2560 x 1440) @60 Hz

NOTE: HDMI2.0 and MFDP (Multi-Function DisplayPort) Type-C ports on the back of all docks in the WD19 family are toggled. HDMI2.0 and MFDP Type-C cannot support dual monitors simultaneously. Only one of these ports can be used as a display device at a time.

NOTE: If higher resolution monitors are used, the Graphics driver makes a judgment based on monitor specifications and display configurations. Some resolutions may not be supported and so will be removed from the Windows Display Control Panel.

NOTE: Configuration that is supported with AMD and Nvidia in special-graphics mode. This mode is listed in the BIOS for the Dell Precision mobile workstations 7530/7730 will require enabling special-graphics mode when Switchable is enabled. Precision 7530 and Precision 7730 with AMD Graphics can only support dual 4K@60 Hz non-HDR monitors when, both monitors are plugged to the two DP ports (not HDMI). Precision 7540 and Precision 7740 with AMD Graphics can support up to six displays dependent on GPU capability. With Nvidia Graphics, it can support up to four displays.

NOTE: Linux operating system is unable to physically turn-off built-in display, the external display numbers will be one less than the display numbers listed in above tables. If the Display Port Data Rate is HBR2, then, the maximum resolution that Linux supports is 8192 x 8192 (counted with built-in display plus external display).

Removing the USB Type-C cable module

Prerequisites


The Dell Performance Docking Station WD19DC is shipped with the USB Type-C cable attached. To remove/change the cable module, follow these steps:

Steps

1. Turn over the docking station.



2. Remove the two M2.5 x 5 screws [1], and turn over the docking station [2].

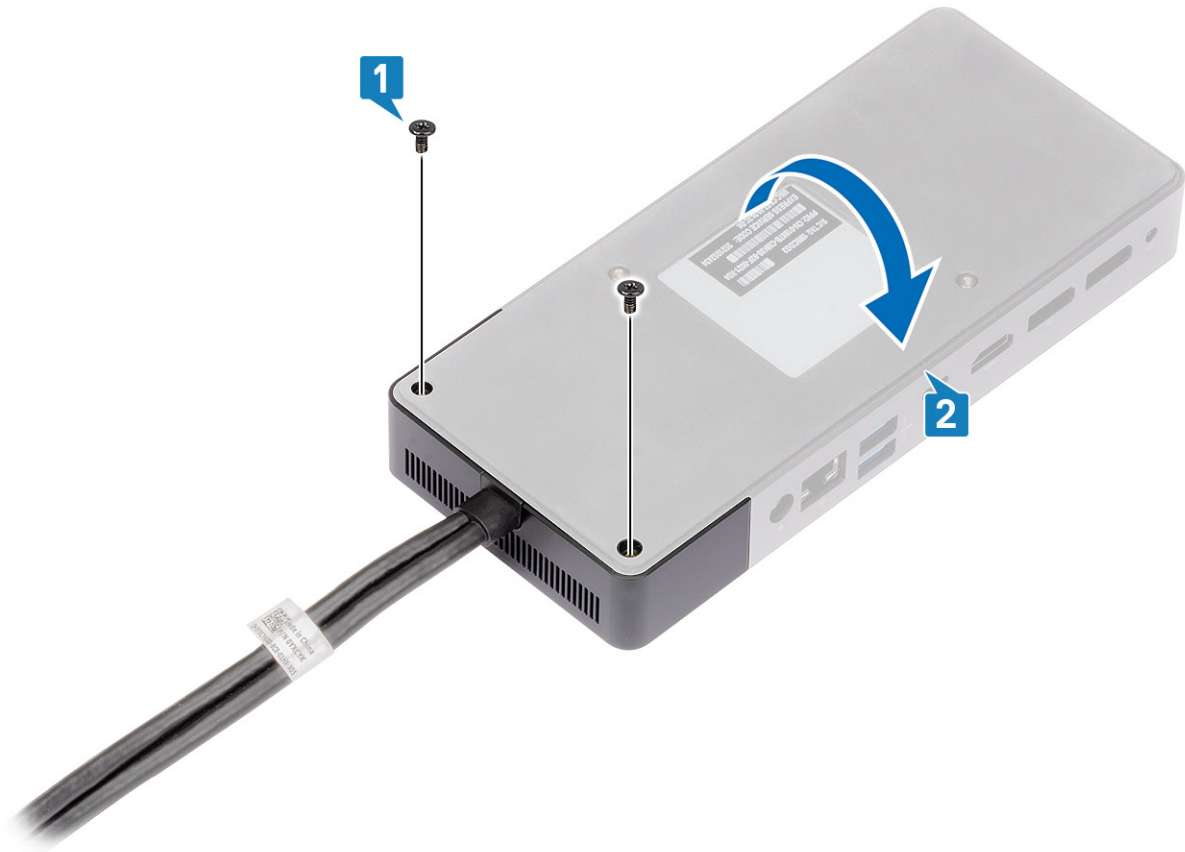

3. Gently pull the cable module away from the docking station.



4. Lift and remove the USB Type-C cable module from its connector inside the docking station.



Technical specifications

Topics:

- LED Status Indicators
- Docking specifications
- Input/Output (I/O) Connectors
- Dell ExpressCharge and ExpressCharge boost overview

LED Status Indicators

Power Adapter LED

Table 4. Power Adapter LED indicator

State	LED Behavior
Power Adapter is plugged into wall socket	Solid White

Cable LED

Table 5. Cable LED indicator

State	LED Behavior
Connected to a Dell Precision 7000 Series laptop (7730/7530) with a dual USB Type-C port.	Solid White

Docking Status Indicator

Table 6. Docking Station LED Indicators

State	LED Behavior
Docking station is receiving power from power adapter	Flash three times

Table 7. Cable LED Indicators

State	LED Behavior
USB Type-C host supports video + data + power	On
USB Type-C host does not support video + data + power	Off (will not illuminate)

Table 8. RJ-45 LED Indicators

Link Speed Indicators	Ethernet Activity Indicator
10 Mb = Green	Amber Flashing
100 Mb = Amber	
1 Gb = Green + Orange	

Docking specifications

Table 9. Docking Specifications

Features	Specifications
Standard	Dual USB 3.1 Gen1/Gen2 Type-C
Video Ports	• USB 3.1 Gen1/Gen2 Type-C with DisplayPort 1.4 or HDMI2.0 x1 • DisplayPort++ 1.4 x2
Audio Ports	• Front Headset connector x1 • Rear Line out x1
Network Port	• Gigabit Ethernet (RJ-45) x1 • Support Wake On LAN from S3, S4, or S5 sleep state with select Dell systems. See platform setup guide for more details. • Support MAC Address Pass-Through with select Dell systems. See platform setup guide for more details.
USB Ports	• Front USB 3.1 Gen1 x1: Dell PowerShare BC1.2; 2 A @ 5 V (max 10 W) • Front USB 3.1 Gen1/Gen2 Type-C: 1.5 A @ 5 V (max 7.5 W) • Rear USB 3.1 Gen1 x2: 0.9 A @ 5 V (max 4.5 W) • Rear USB 3.1 Gen1/Gen2 Type-C with DisplayPort 1.4 x1: 3 A @ 5 V (max 15 W)
DC-in Port	7.4 mm DC-in port x1
USB Type-C cable length	0.8 m
Power delivery	Dell systems • 210 W to Dell Precision mobile workstations 7000 series with 240 W AC-adapter • 130 W to Dell systems (single cable plugged in) with 240 W AC-adapter Non-Dell systems • 90 W support for USB Power Delivery 3.0 (single cable plugged in).
Button	• Sleep/Wakeup/Power button
Dimension	205 mm x 90 mm x 29 mm
Weight	685 g / 1.51 lbs
Power adapter weight	769 g / 1.7 lbs
Temperature range	Operating: 0°C–35°C (32°F–95°F) Non-operating: • Storage: -20°C to 60°C (-4°F to 140°F) • Shipping: -20°C to 60°C (-4°F to 140°F)
Relative humidity	Operating: 10% to 80% (non-condensing) Non-operating: • Storage: 5% to 90% (non-condensing) • Shipping: 5% to 90% (non-condensing)
VESA Mounting options	Yes—using Dell Docking station mounting kit

Input/Output (I/O) Connectors

The Dell Performance Docking Station WD19DC has the following I/O connectors:

Table 10. I/O connectors

Ports	Connectors
Video Ports	• DisplayPort++ 1.4 x2 • USB 3.1 Gen1/Gen2 with DisplayPort 1.4 or HDMI2.0 x1
Input/Output Ports	• USB 3.1 Gen1 x 2 • USB 3.1 Gen1 with PowerShare x 1 • USB 3.1 Gen1/Gen2 Type-C • 7.4 mm DC-in x 1 • Gigabit Ethernet (RJ-45) x 1 • Headset connector x 1 • Line-out connector x 1

Dell ExpressCharge and ExpressCharge boost overview

- Dell ExpressCharge enables an empty battery to charge to 80% in about one hour when the system is turned off and to 100% in approximately two hours.
- Dell ExpressCharge Boost enables an empty battery to charge to 35% in 15 minutes.
- Metrics are created for **system off** given charge time with the system on has varied results.
- Customers must enable ExpressCharge mode in the BIOS or through Dell Power Manager to take advantage of these features.
- Check your Dell Latitude or Dell Precision system for the battery size using the table to determine compatibility.

Table 11. Dell ExpressCharge compatibility

Power Delivery to System	Max Battery Size for ExpressCharge	Max Battery Size for ExpressCharge Boost
90 W with 130 W adapter	92 Whr	53 Whr
130 W with 180 W adapter	100 Whr	76 Whr


Dell docking station firmware update

Standalone Dock Firmware Update utility


NOTE: Information that is provided is for Windows users running the executable tool. For other operating systems or further detailed instructions see the WD19 admin guide available on www.dell.com/support.

Download the WD19DC driver and firmware update from www.dell.com/support. Connect the dock to the system and start the tool in administrative mode.


1. Wait for all the information to be entered in the various Graphical User Interface (GUI) panes.

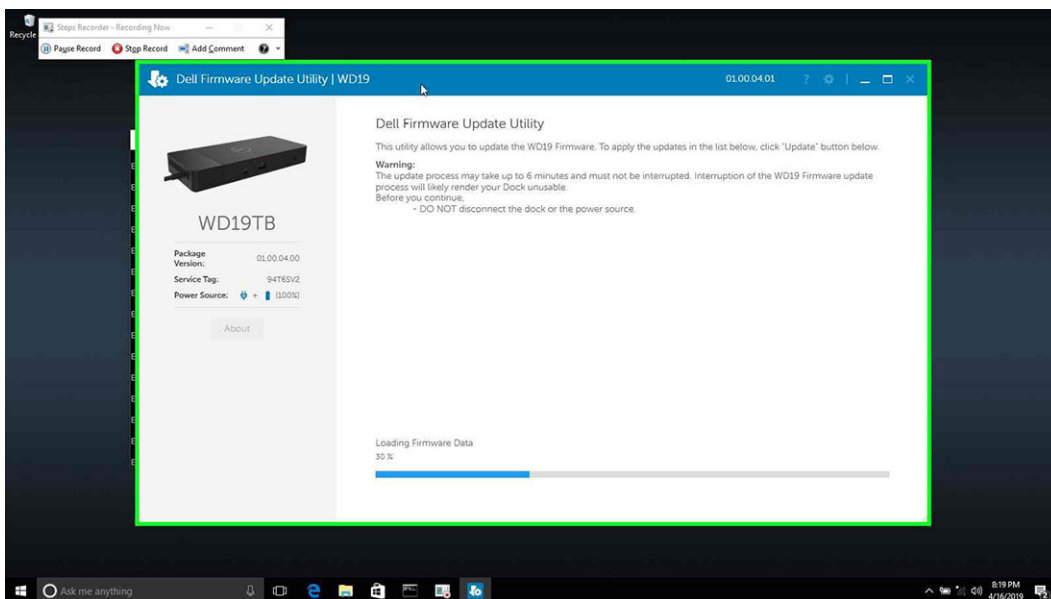

2. **Update** and **Exit** buttons are displayed in the bottom-right corner. Click the **Update** button.

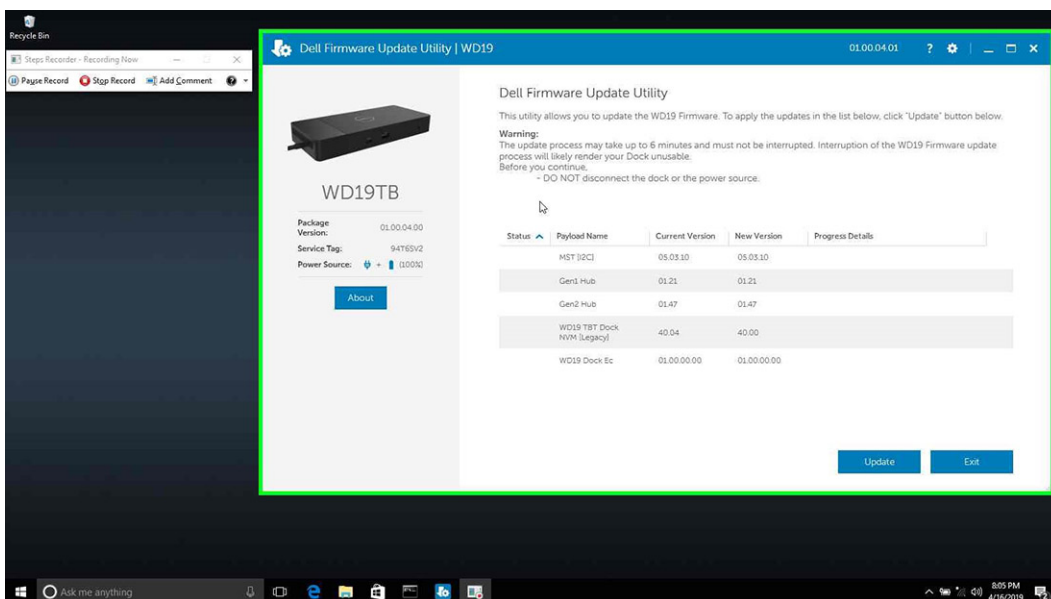

3. Wait for all the component firmware update to complete. A progress bar is displayed in the bottom.

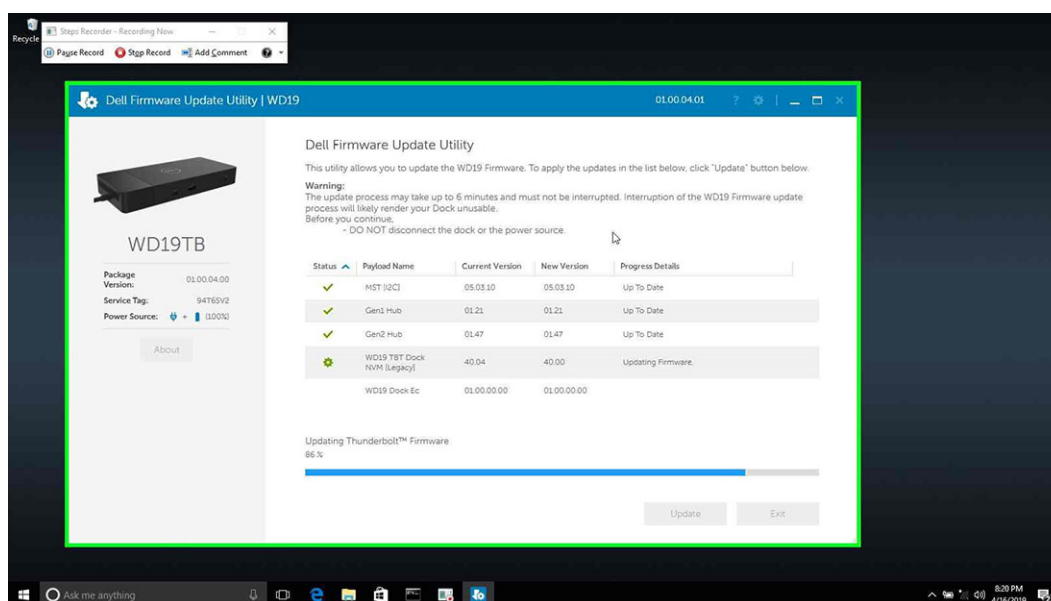

4. The update status is displayed above the payload information.

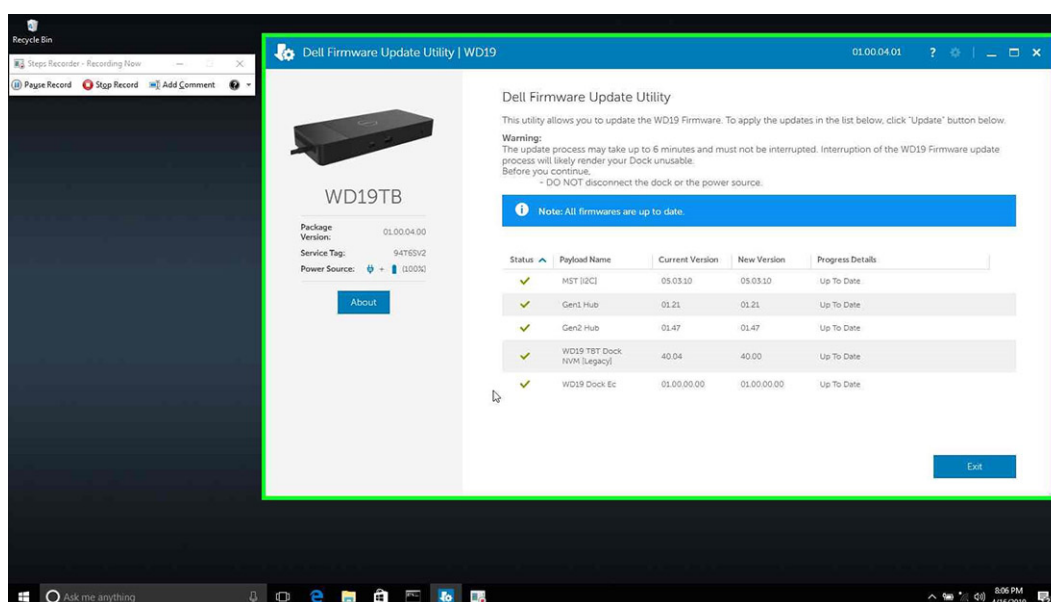


Table 12. Command-Line Options

Command lines	Function
/? or /h	Usage.
/s	Silent.
/f	Force update.
/forceit	Skip power check.
/l=<filename>	Log file.
/verflashexe	Display utility version.
/componentsvers	Display current version of all dock firmware components.

For IT professionals and engineers, to get more information about the following technical topics, see the Dell Docking Station WD19DC Administrator's Guide:

- Step-by-step stand-alone DFU (Dock Firmware Update) and driver update utilities.
- Using DCU (Dell Command | Update) for driver download.

- Dock asset management locally and remotely through DCM (Dell Command | Monitor) and SCCM (System Center Configuration Manager).

Frequently asked questions

1. The fan is not working after connecting with the system.

- The fan is triggered by temperature. The dock fan will not rotate until the dock is hot enough to trigger a thermal threshold.
- Vice versa, if your dock is not cool enough, the fan will not stop even when you disconnect the dock from the system.

2. The dock does not work after high-speed fan noise.

- When you hear a loud fan noise, it is warning you that the dock is in some kind of a hot condition. For example, the vent in the dock may be blocked or the dock is working in a high working-temperature environment (> 35C), etc.. Please eliminate these abnormal conditions from the dock. If you do not eliminate the abnormal condition, in a worst-case situation, the dock will shut down through the over-temperature protection mechanism. Once this happens, please un-plug the Type-C cable from the system and remove the dock's power. Then wait 15 seconds and plug in the dock power to recover the dock back online.

3. I hear a fan noise when I plug in the dock's AC adapter.

- This is a normal condition. First time plugging in of the dock's AC adapter will trigger the fan to rotate, but it will subsequently turn off very soon.

4. I hear a loud fan noise. What's wrong?

- The dock fan is designed with five different rotate speeds. Normally, the dock will work on low fan speed. If you put the dock in a heavy loading, or in a high working-temperature environment, the dock fan may have a chance to work at a high speed. But, this is normal and the fan will work at a low/high speed depending on the work loading.

Table 13. Fan states

State	State name	Fan speed (rpm)
0	Fan off	Off
1	Fan minimum	1900
2	Fan low	2200
3	Fan medium	2900
4	Fan medium-high	3200
5	Fan high	3600

5. What is the charging station feature?

- The Dell Performance Docking Station WD19DC can charge your mobile or power bank even without being connected to the system. Just make sure your dock is connected to external power. The dock fan will rotate automatically if the dock gets too warm. This is normal working condition.

6. Why does it take a long time for the system to recognize all the peripheral devices which are attached to the docking station?

- Security is always Dell's highest priority. We ship our systems with "Security level - User Authorization" setting by default. This allows our customers to review the Thunderbolt security conditions of their systems so they can make selections accordingly. However, this also means the Thunderbolt dock and the devices attached to it will need to pass Thunderbolt driver security permission checking to get it connected and initialized. This normally means some extra time is needed before these devices can be accessed by users.

7. Why does the hardware installation window show up when I plug in a USB device to the docking stations ports?

- When a new device is plugged in, the USB hub driver notifies the Plug and Play (PnP) manager that a new device was detected. The PnP manager queries the hub driver for all of the device's hardware IDs and then notifies the Windows OS that a new device needs to be installed. In this scenario, the user will see a hardware installation window.

<https://msdn.microsoft.com/en-us/windows/hardware/drivers/install/step-1--the-new-device-is-identified>

<https://msdn.microsoft.com/en-us/windows/hardware/drivers/install/identifiers-for-usb-devices>

8. Why do the peripheral devices, which are connected to the dock station, become unresponsive after recovering from a power loss?

- Our Dell dock is designed to operate on AC power only and it does not support system power source back (powered by system Type-C port). A power loss event will make all devices on the dock fail to work. Even when you restore the AC

power, the dock may still not function properly because the dock still needs to negotiate proper power contract with the system's Type-C port and establish a system EC-to-dock-EC connection.

Troubleshooting the Dell Performance Docking Station WD19DC

Topics:

- [Symptoms and solutions](#)

Symptoms and solutions

Table 14. Symptoms and solutions

Symptoms	Suggested solutions
1. No video on the monitors that are attached to the High Definition Multimedia Interface (HDMI), or DisplayPort (DP) port on the docking station.	• Ensure that the latest BIOS and drivers for your system and the docking station are installed on your system. • Ensure that your system is connected to the docking station securely. Try to disconnect and reconnect the docking station to the notebook system. • Disconnect both ends of the video cable and check for damaged/bent pins. Securely re-connect the cable to the monitor and docking station. • Ensure the video cable (HDMI, or DisplayPort) is connected properly to the monitor and the docking station. Ensure to select the correct video source on your monitor (see your monitor's documentation for more information about changing the video source). • Check the resolution settings on your system. Your monitor may support higher resolutions than what the docking station can support. See the Display Resolution Table for more information about maximum resolution capacity. • If your monitor is connected to the docking station, the video output on your system may be disabled. You can enable the video output using the Windows Control Panel or see the User Guide of your system. • If only one monitor is shown, while the other is not, go to Windows Display Properties, and under Multiple Displays, select the output for the second monitor. • Using Intel graphics and using the system LCD, only two additional displays can be supported. • For NVIDIA or AMD discrete graphics, the dock supports three external displays plus the system LCD. • Try with a different monitor and cable that is known to be good, if possible.
2. The video on the attached monitor is distorted or flickering.	• Reset the monitor to Factory Defaults. See the User Guide of your monitor for more information about how to reset the monitor to factory defaults. • Ensure that the video cable (HDMI, or DisplayPort) is connected securely to the monitor and the docking station. • Disconnect and reconnect the monitor/s from the docking station.

Table 14. Symptoms and solutions (continued)

Symptoms	Suggested solutions
	- First power off the docking station by disconnecting the Type-C cable and then removing the power adapter from the dock. Then, power on the docking station by connecting power adapter to the dock before connecting the Type-C cable to your system. - Undock and reboot the system if, the above steps do not work.
3. The video on the attached monitor is not displaying as an Extended Monitor.	- Ensure that the Intel HD Graphics driver is installed in the Windows Device Manager. - Ensure that the nVidia or AMD Graphics driver is installed in the Windows Device Manager. - Open the Windows Display Properties and go to Multiple Displays control to set the display to the extended mode.
4. The audio connector is not functioning or there is a lag in the audio.	- Ensure that the latest BIOS and drivers for your system and the docking station are installed on your system. - If your BIOS Setup has an Audio Enabled/Disabled option, ensure it is set to Enabled. - Ensure that the correct playback device is selected on the notebook system. - Try to re-plug the audio cable to the external speaker output on the docking station. - First power off the docking station by disconnecting the Type-C cable and then removing the power adapter from the dock. Then, power on the docking station by connecting the power adapter to the dock before connecting the Type-C cable to your system.
5. The USB ports are not functioning on the docking station.	- Ensure that the latest BIOS and drivers for your system and the docking station are installed on your system. - If your BIOS Setup has a USB Enabled/Disabled option, ensure it is set to Enabled. - Verify if the device is detected in Windows Device Manager and that the correct device drivers are installed. - Ensure that the docking station is connected securely to the notebook system. Try to disconnect and reconnect the docking station to the system. - Check the USB ports. Try plugging the USB device into another port. - First power off the docking station by disconnecting the Type-C cable and then removing the power adapter from the dock. Then, power on the docking station by connecting the power adapter to the dock before connecting the Type-C cable to your system.
6. The High-Bandwidth Digital Content Protection (HDCP) content is not displayed on the attached monitor.	Dell Dock supports HDCP up to HDCP 2.2.  NOTE: User's monitor/display must support HDCP 2.2
7. The LAN port is not functioning.	- Ensure that the latest BIOS and drivers for your system and the docking station are installed on your system. - Ensure that the RealTek Gigabit Ethernet Controller is installed in the Windows Device Manager. - If your BIOS Setup has a LAN/GBE Enabled/Disabled option, ensure it is set to Enabled - Ensure that the Ethernet cable is connected securely on the docking station and the hub/router/firewall.

Table 14. Symptoms and solutions (continued)

Symptoms	Suggested solutions
	- Check the status LED of the Ethernet cable to confirm connectivity. Re-connect both ends of the Ethernet cable if the LED is not lit. - First power off the docking station by disconnecting the Type-C cable and then removing the power adapter from the dock. Then, power on the docking station by connecting the power adapter to the dock before connecting the Type-C cable to your system.
8. Cable LED is not ON after it is connected to your host.	- Ensure the WD19DC is connected to AC power. - Ensure that the system is connected with the docking station. Try to disconnect and re-connect again with the docking station.
9. USB port has no function in a pre-OS environment.	- If your BIOS has an USB Configuration page, ensure that the following options are checked: 1. Enable USB Boot Support 2. Enable External USB Port
10. PXE boot on dock does not function.	- If your BIOS has an integrated NIC page, select Enabled w/PXE. - If your BIOS Setup on your system has an USB Configuration page, ensure that the following options are checked: 1. Enable USB Boot Support
11. USB Boot does not function.	- If your BIOS has an USB Configuration page, ensure that the following options are checked: 1. Enable USB Boot Support 2. Enable External USB Port
12. AC Adapter is displayed as "Not Installed" in the Battery Information page of the Dell BIOS Setup when the Type-C cable is connected.	1. Ensure the Dell Performance Docking Station WD19DC is connected properly to its own adapter (240 W). 2. Ensure the cable LED of your docking station is ON. 3. Disconnect and re-connect the (Type-C) cable to your system.
13. Peripherals connected to the docking station do not work in a pre-OS environment.	- If the BIOS Setup on your system has an USB Configuration page, check the following option to enable docking station function in a pre-OS environment: - Enable External USB Port
14. Alert message "You have attached an undersized power adapter to your system" is displayed when the docking station is connected to your system.	- Ensure that the docking station is connected properly to its own power adapter. Computer requiring more than 130 W power input must also be connected to their own power adapter for charging and operating at full performance. - First power off the docking station by disconnecting the Type-C cable and then removing power adapter from the dock. Then, power on the docking station by connecting the power adapter to the dock before connecting the Type-C cable to your system.
15. Undersized power adapter warning message that is displayed and cable LED are off.	The docking connector has disconnected from the system's USB ports. Reconnect the docking cable from the system, wait for 15 seconds or more, and then dock again.
16. No external display. USB or data and cable LED is off.	- The docking connector has disconnected from the system's USB ports. Reconnect the docking connector. - Undock and reboot the system if the above steps do not work.

Table 14. Symptoms and solutions (continued)

Symptoms	Suggested solutions
17. When system or dock is moved the cable LED turns off.	• Avoid moving the system/dock when the docking cable is connected to the system.
18. With Ubuntu 18.04, WIFI will be turned off when the docking station is connected to the system and the WIFI turns On again after rebooting the system.	• Please uncheck the option Control WLAN radio in BIOS. • Option is available in - Settings -> Power Management -> Wireless Radio Control.

Getting help

Topics:

- [Contacting Dell](#)

Contacting Dell

Prerequisites

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

About this task

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

Steps

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.