

Dell Pro 20 Monitor E2026H

Teardown Instruction

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

- Safety instructions.....4**
 - Before working inside your monitor 4**
 - After working inside your monitor 4**
- Disassembly and reassembly.....5**
 - Recommended tools 5**
 - Screw list..... 5**
 - Stand 6**
 - Removing the stand.....6
 - Installing the stand.....7
 - Back cover..... 8**
 - Removing the back cover8
 - Installing the back cover10
 - Chassis assembly 11**
 - Removing the chassis assembly11
 - Installing the chassis assembly13
 - Keypad board..... 15**
 - Removing the keypad board15
 - Installing the keypad board16
 - Interface board 17**
 - Removing the interface board17
 - Installing the interface board20
 - Power board 23**
 - Removing the power board23
 - Installing the power board.....24
- Contacting Dell25**
- Revision History26**

Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your monitor.

NOTE: Before using the monitor, read the safety information that is shipped with your monitor and printed on the product. Keep the documentation at a secure location for future reference.

WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

CAUTION: The possible long-term effect of listening to audio at high volume through the headphones (on a monitor that supports it) may cause damage to your hearing ability.

- Place the monitor on a solid surface and handle it carefully. The screen is fragile and can be damaged if dropped or pressed with a sharp object.
- Ensure that your monitor is electrically rated to operate with the AC power available in your location.
- Maintain the monitor at room temperature. Prolonged exposure to excessive heat or cold may affect the liquid crystal components of the display.
- Connect the power cable from the monitor to a wall outlet that is near and accessible.
- Do not place and use the monitor on a wet surface or near water.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
- Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions that are marked on the product.
- Certain monitors can be wall mounted using the VESA mount that is sold separately. Please ensure that the appropriate VESA specifications are followed, as detailed in the wall mounting section of the User's Guide.

For information about safety instructions, see the *Safety, Environmental, and Regulatory Information (SERI)* document that is shipped with your monitor.

Before working inside your monitor

Steps

1. Save and close all open files and exit all open applications.
2. Turn off your monitor.
3. Disconnect your monitor and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and dock from your monitor.

CAUTION: To disconnect a network cable, first unplug the cable from your monitor and then unplug the cable from the network device.

5. Remove any media card and optical disc from your monitor, if applicable.

After working inside your monitor

CAUTION: Leaving any loose or misplaced screws inside your monitor may severely damage it.

Steps

1. Replace all screws and ensure that no stray screws remain inside your monitor.
2. Reconnect all external devices, peripherals, and cables that were removed before working on your monitor.
3. Replace any media cards, discs, or any other parts that you removed before working on your monitor.
4. Connect your monitor and all attached devices to their electrical outlets.
5. Turn on your monitor.

Disassembly and reassembly

⚠ CAUTION: The information in this section is intended for authorized service technicians in the EMEA region. Dell prohibits users from disassembling the monitor, and any damage caused by unauthorized servicing will not be covered under the warranty.

Recommended tools

- Phillips screwdriver #2
- Nut driver 5 mm
- Plastic scribe

Screw list

- ⓘ NOTE:** When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- ⓘ NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- ⓘ NOTE:** Screw color may vary with the configuration ordered.

Table 1. Screw list.

Component	Screw type	Quantity	Screw image
Back cover hinge	M4x4.5	2	
Interface board	M3x6	1	
Power board	M3x6	2	
Power-board grounding	M4x9	1	
VGA port	#4-40x11.8	2	

Stand

Removing the stand

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)

Steps

1. Lift the stand assembly up to access the release button.
2. Using a screwdriver, press the release button and pull the stand assembly away from the monitor.
3. Press the release tab at the bottom of the stand base and separate the stand riser from the stand base.

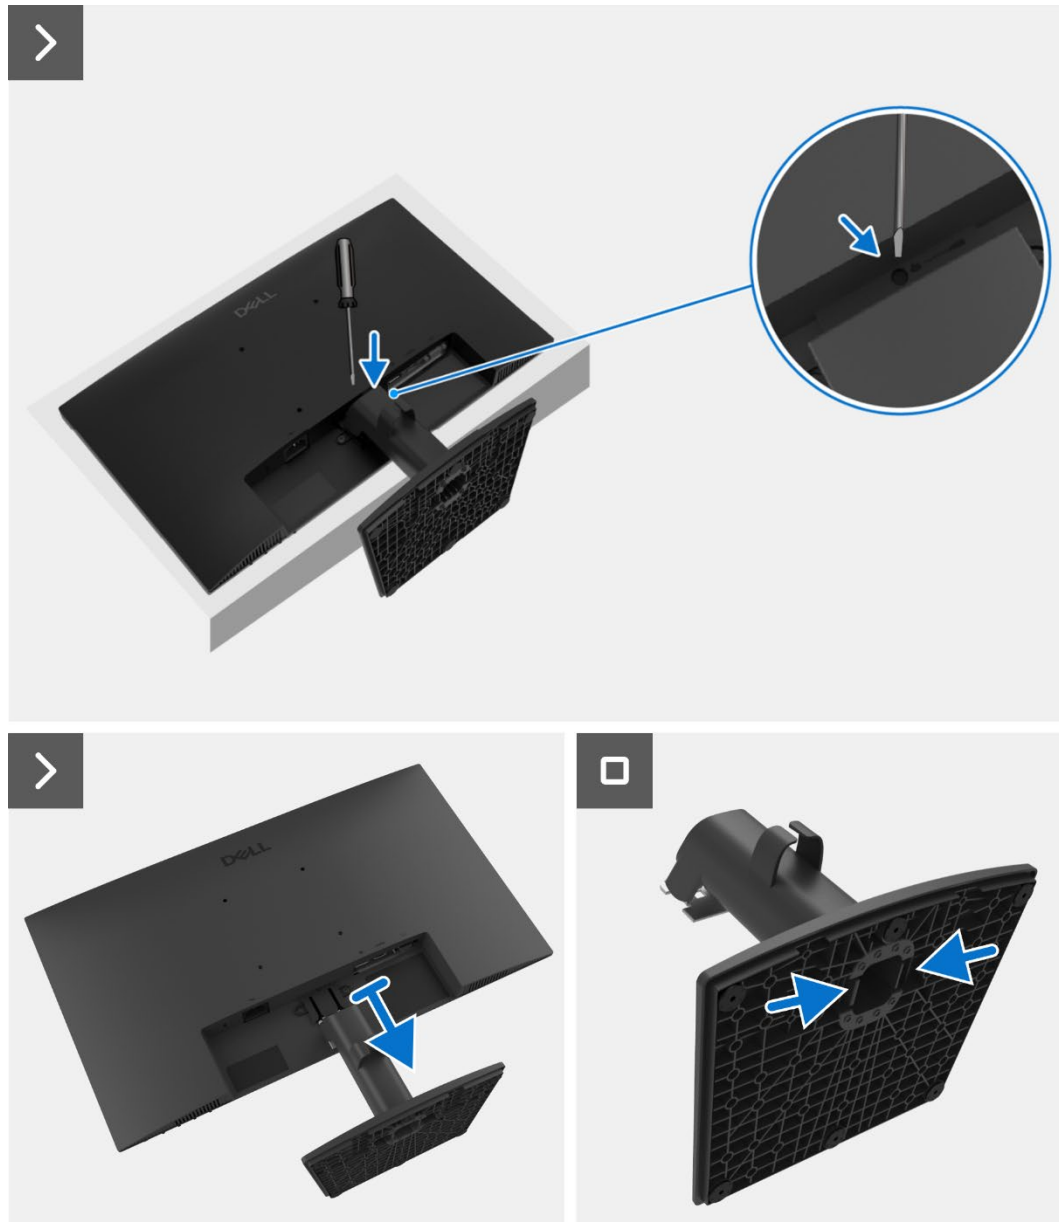


Figure 1. Removing the stand

Installing the stand

Steps

1. Align and insert the stand riser into the stand base until it snaps into place.
2. Slide the stand assembly into the grooves on the display back cover and snap it in place.



Figure 2. Installing the stand

Next steps

1. Follow the procedure in [After working inside your monitor.](#)

Back cover

Removing the back cover

Prerequisites

1. Follow the procedure in [Before working inside your monitor](#).
2. Remove the [stand](#).

Steps

1. Remove the two screws (M4x4.5) that secure the back cover to the chassis assembly.
2. Using a plastic scribe, pry the back cover starting from the bottom edge of the monitor.
3. Lift and remove the back cover away from the monitor.

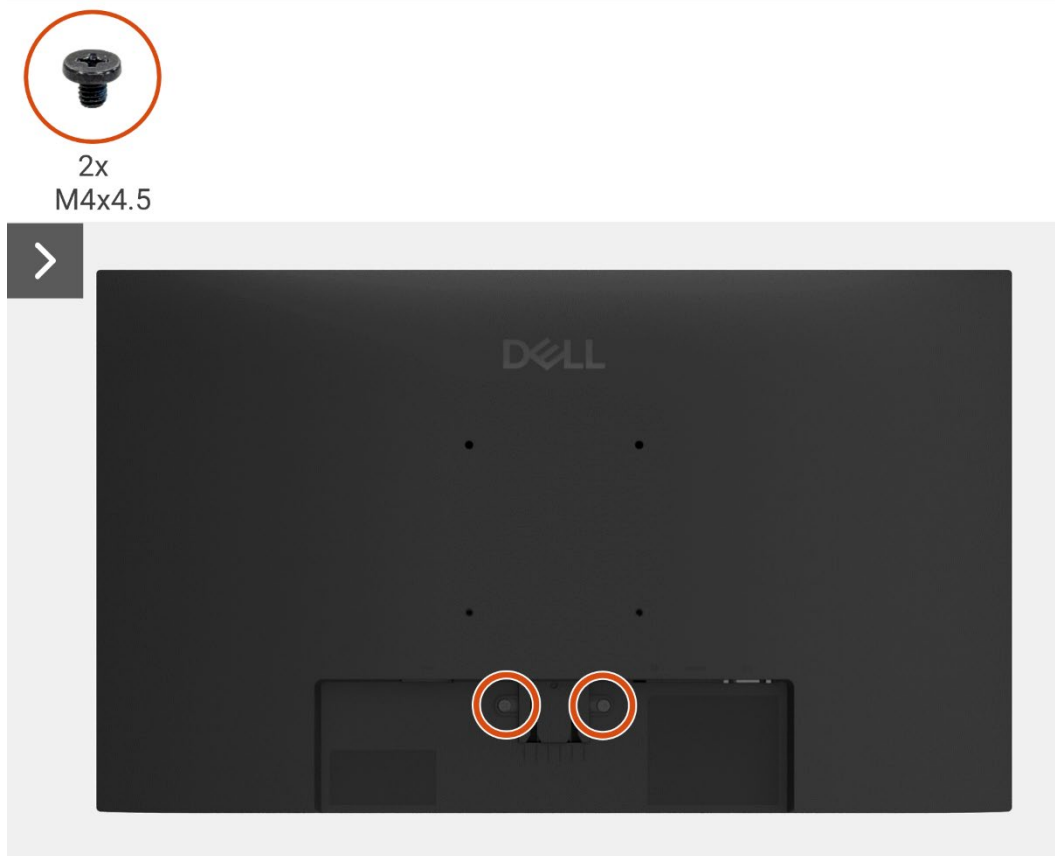


Figure 3. Removing the back cover



Figure 4. Removing the back cover

Installing the back cover

Steps

1. Align the back cover with the chassis and snap it into place.
NOTE: Align the screw holes on the back cover with the screw holes on the chassis assembly before applying slight pressure to the back cover.
2. Replace the two screws (M4x4.5) that secure the back cover to the monitor.

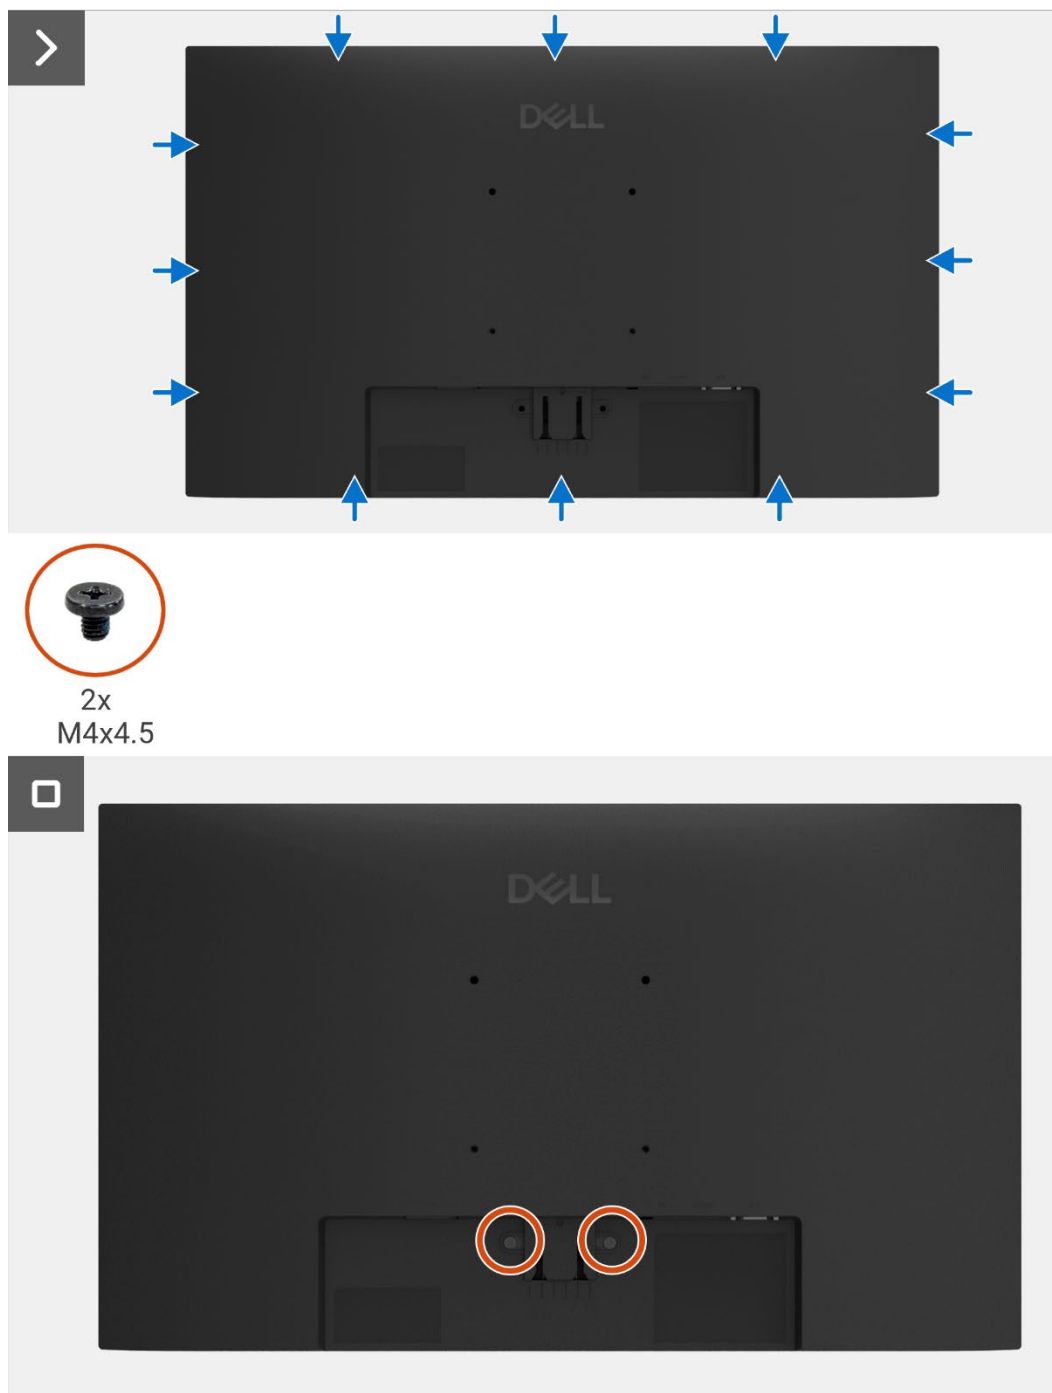


Figure 5. Installing the back cover

Next steps

1. Install the [stand](#).
2. Follow the procedure in [After working inside your monitor](#).

Chassis assembly

Removing the chassis assembly

Prerequisites

1. Follow the procedure in [Before working inside your monitor](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).

Steps

1. Peel the tape that secures the lightbar cable to the display panel.
2. Disconnect the lightbar cable from the connector on the display panel.
3. Open the latch and disconnect the keypad cable from the connector on the interface board.
4. Peel the four aluminum foils from the LVDS cable and chassis assembly.
5. Disconnect the LVDS cable from the connector on the display panel.
6. Remove the chassis assembly from the display panel.

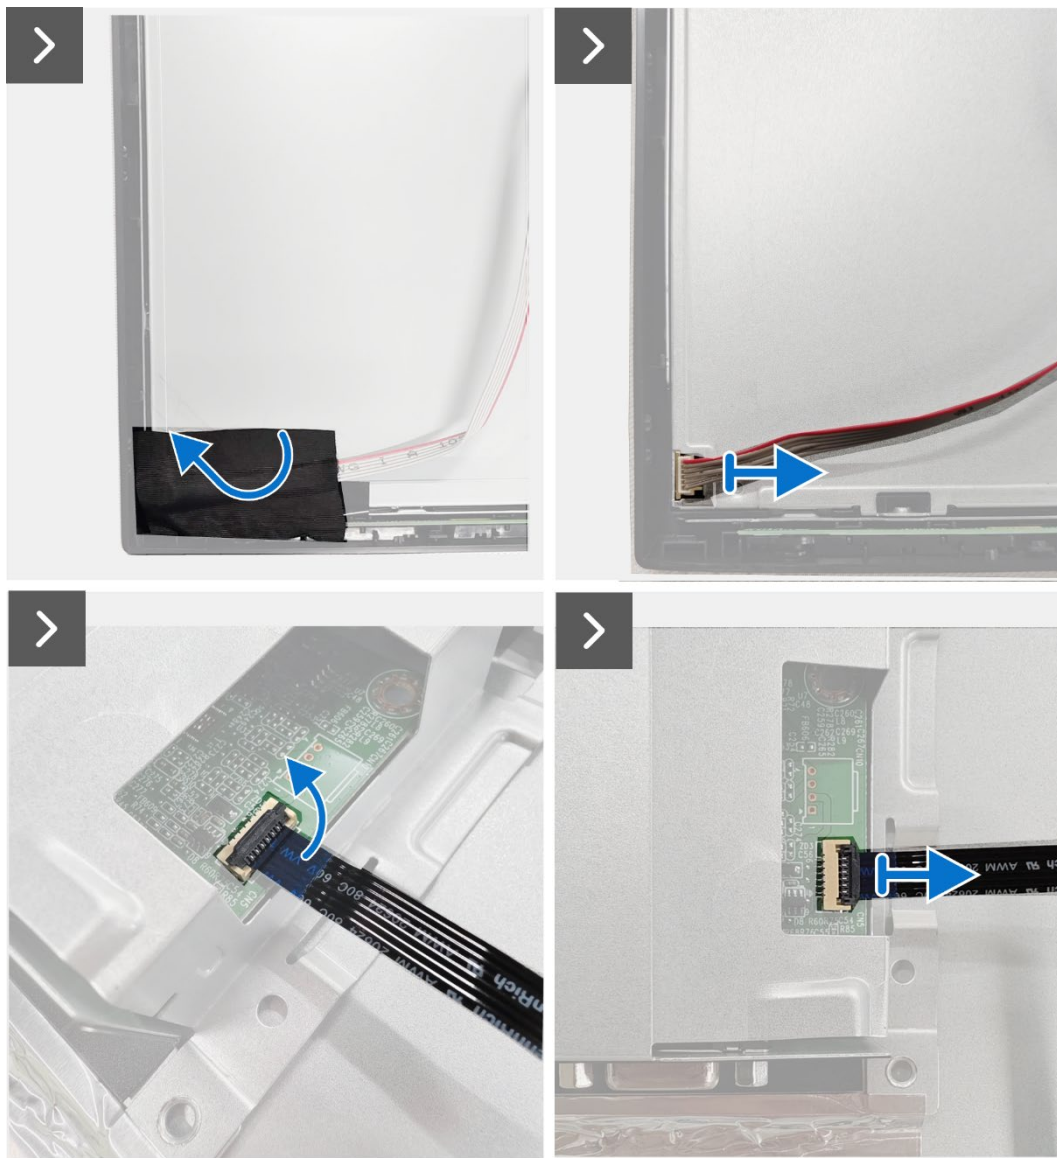


Figure 6. Removing the chassis assembly

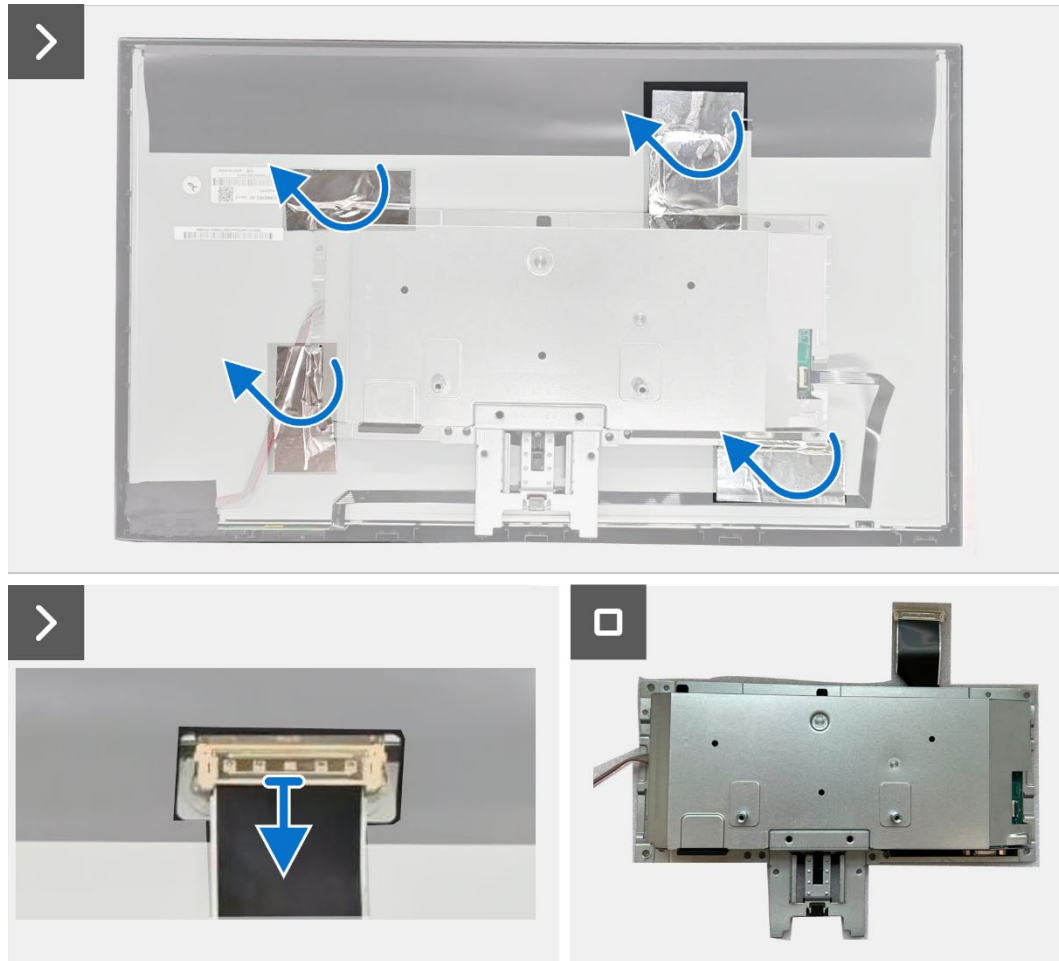


Figure 7. Removing the chassis assembly

Installing the chassis assembly

Steps

1. Connect the LVDS cable to the connector on the display panel.
2. Position the chassis assembly on the display panel, ensuring the notch on the chassis assembly bracket aligns with the rib at the bottom of the display middle-frame.
3. Slide the keypad cable into the connector on the interface board and close the latch to secure it in place.
4. Adhere the three aluminum foils to the LVDS cable and the chassis assembly.
5. Connect the lightbar cable to the connector on the display panel and adhere the tape that secures it to the panel.

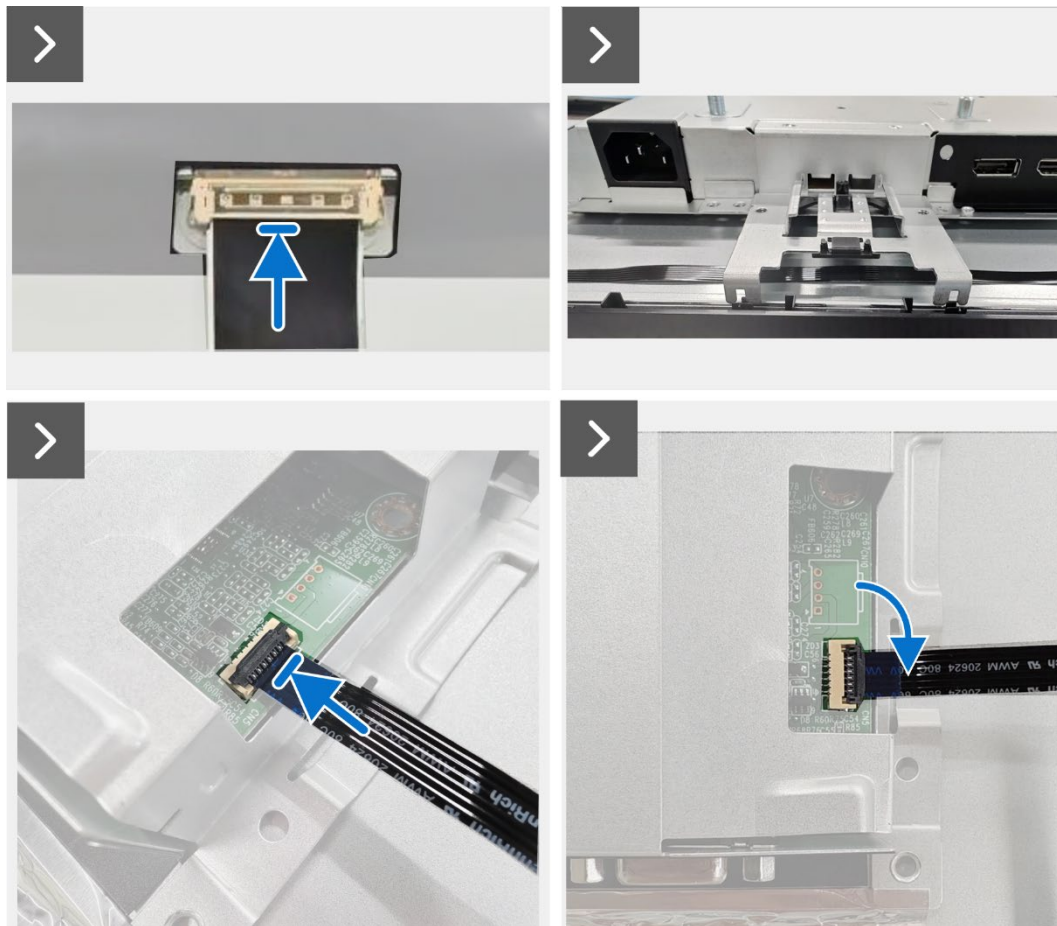


Figure 8. Installing the chassis assembly

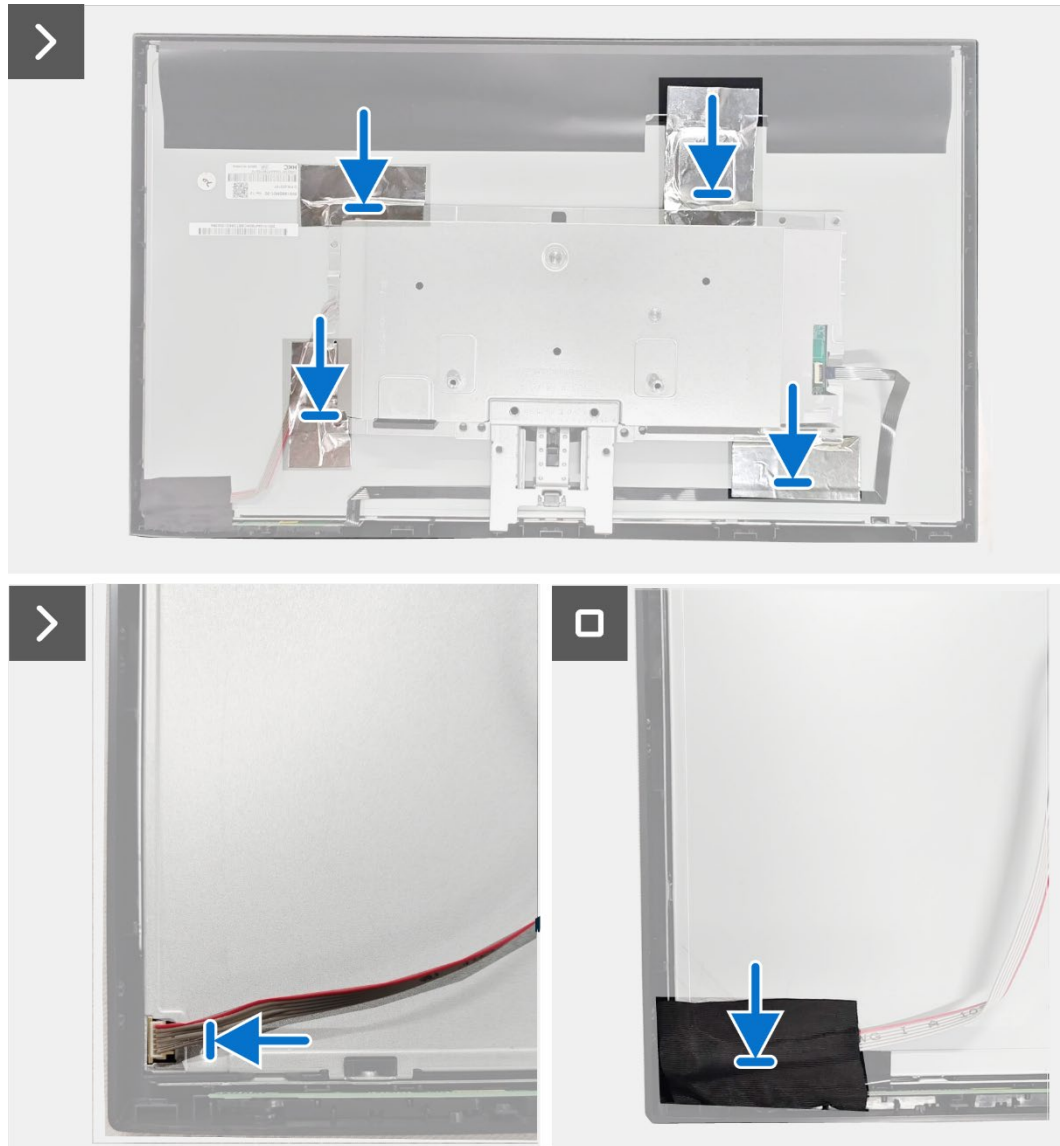


Figure 9. Installing the chassis assembly

Next steps

1. Install the [back cover](#).
2. Install the [stand](#).
3. Follow the procedure in [After working inside your monitor](#).

Keypad board

Removing the keypad board

Prerequisites

1. Follow the procedure in [Before working inside your monitor](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [chassis assembly](#).

Steps

1. Remove the keypad board from the slot on the display middle-frame.
2. Peel the keypad cable from the panel shielding.

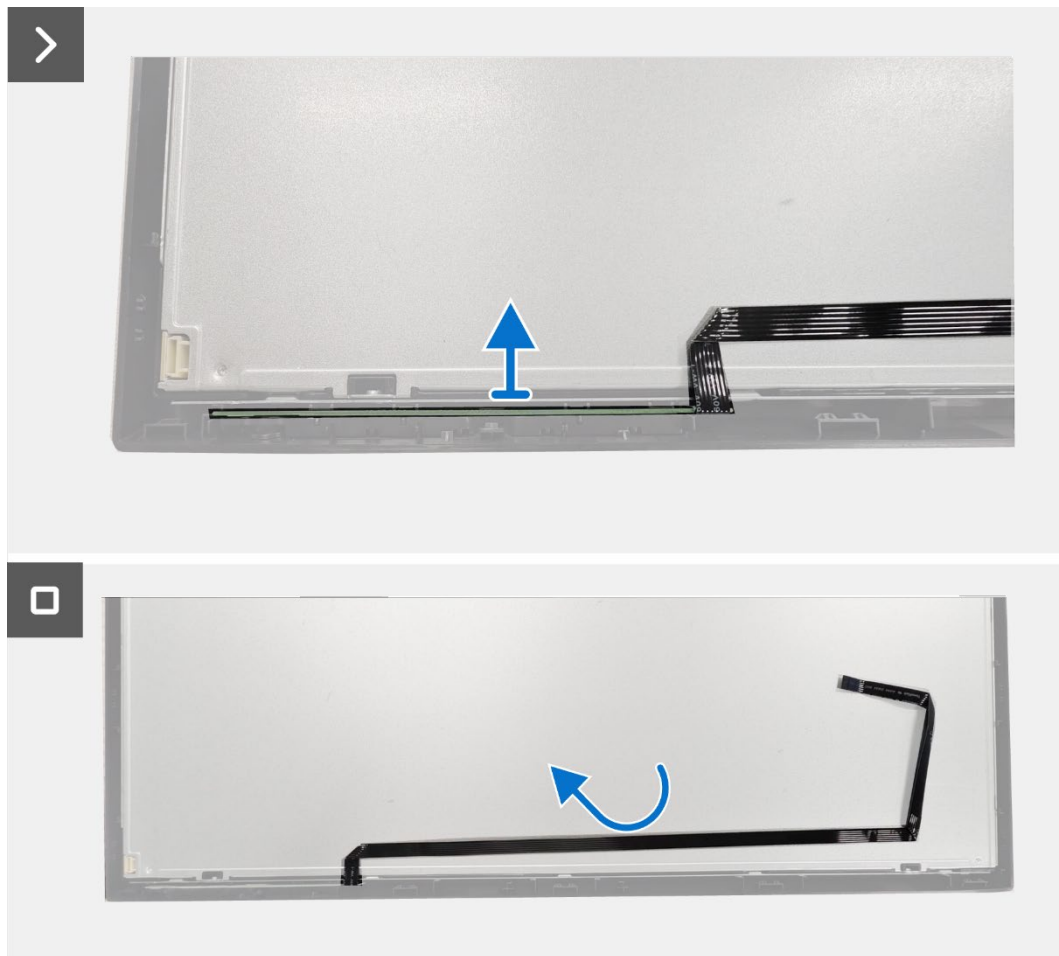


Figure 10. Removing the keypad board

Installing the keypad board

Steps

1. Align and place the keypad board onto the display middle-frame.
2. Adhere the keypad cable to the panel shielding.

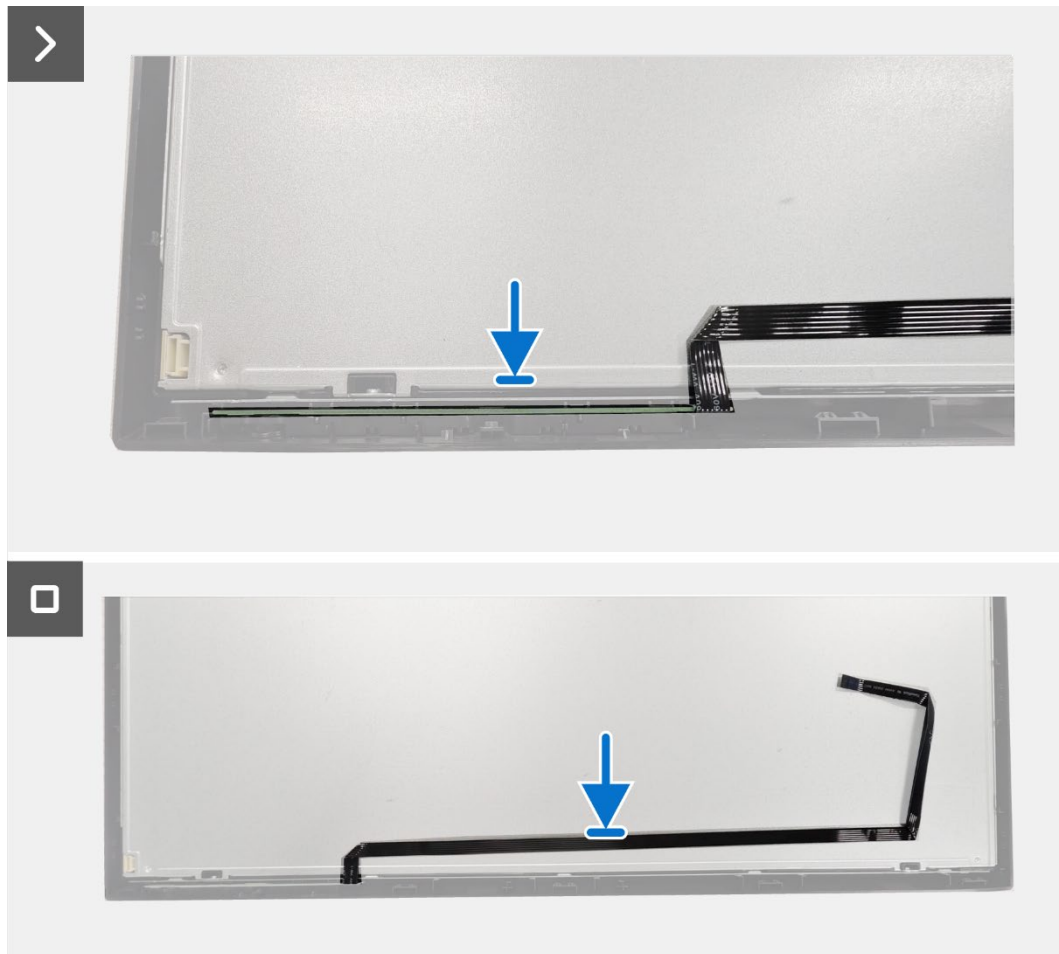


Figure 11 Installing the keypad board

Next steps

1. Install the [chassis assembly](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your monitor](#).

Interface board

Removing the interface board

Prerequisites

1. Follow the procedure in [Before working inside your monitor](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [chassis assembly](#).
5. Remove the [keypad board](#).

Steps

1. Remove the two hex screws from the VGA port.
2. Remove the mylar from the power board.
3. Remove the three screws (M3x6) that secure the interface board and power board to the chassis assembly.
4. Remove the screw (M4x9) that secures the power board to the chassis assembly.
5. Remove the interface board and power board together from the chassis assembly.
6. Turn over the interface board and the power board before placing them on a flat surface.
7. Disconnect the power cable from the connector on the interface board.
8. Open the latch and disconnect the LVDS cable from the connector on the interface board.



#4-40x11.8



Figure 12. Removing the interface board

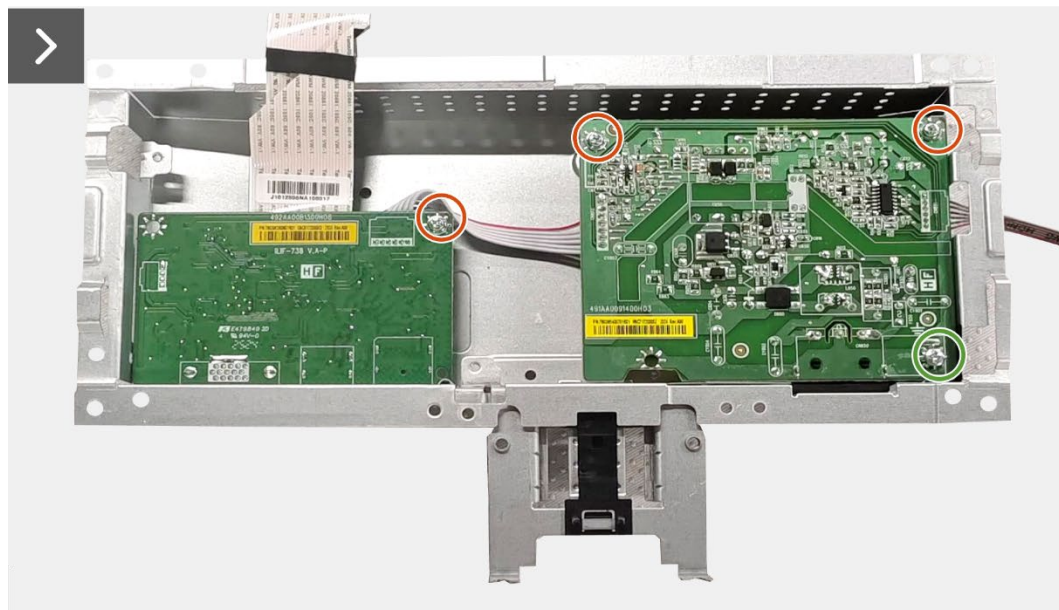
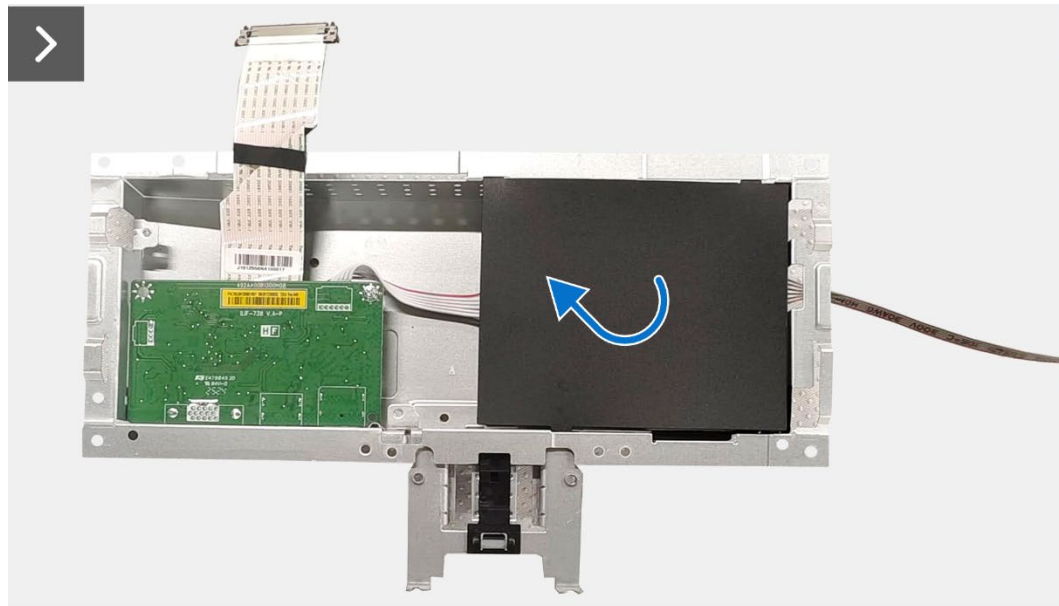


Figure 13. Removing the interface board

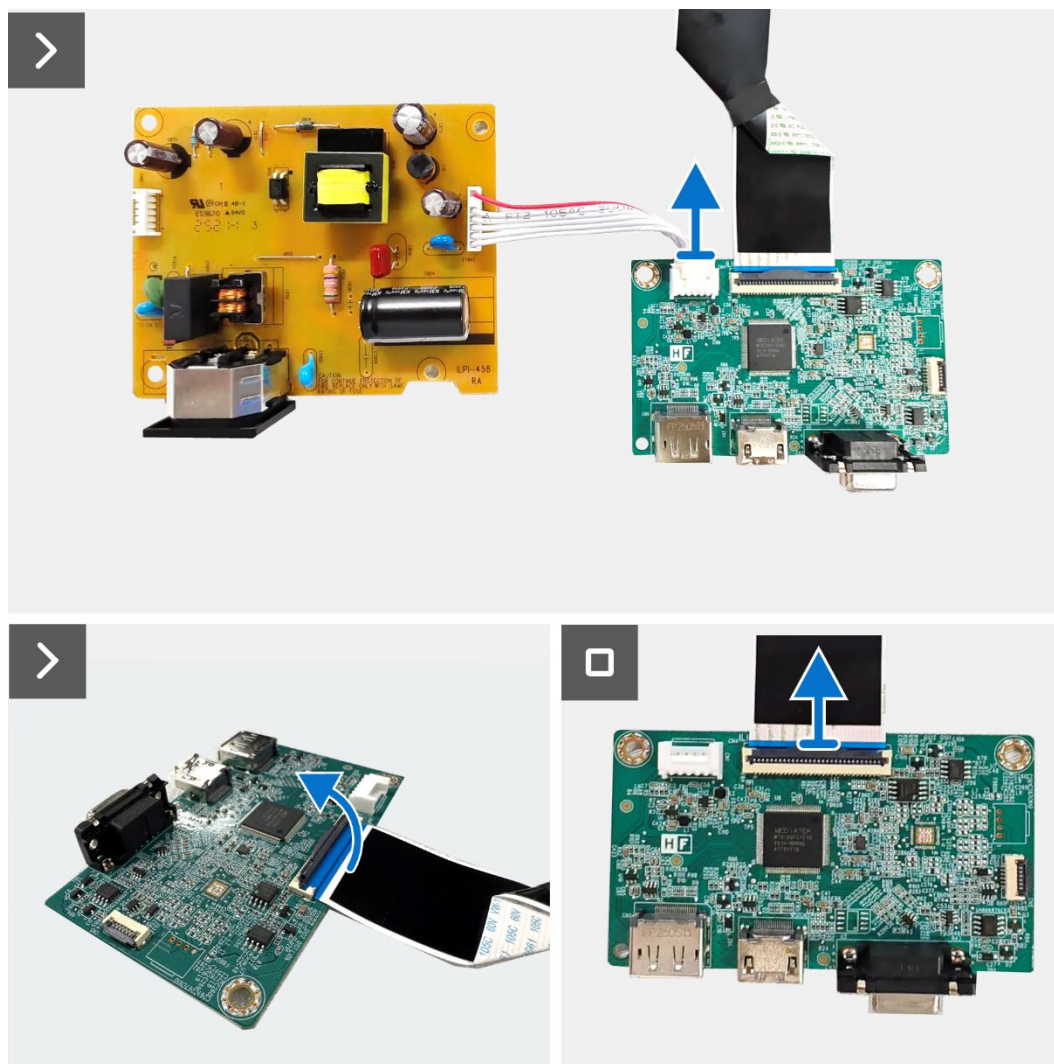


Figure 14. Removing the interface board

Installing the interface board

Steps

1. Slide the LVDS into the connector on the interface board and close the latch to secure it in place.
2. Connect the power cable to the connector on the interface board.
3. Align and place the interface board and the power board together into the chassis assembly.
4. Replace the three screws (M3x6) to secure the interface board and power board to the chassis assembly.
5. Replace the screw (M4x9) to secure the power board to the chassis assembly.
6. Adhere the mylar to the power board.
7. Replace the two hex screws to secure the VGA port.

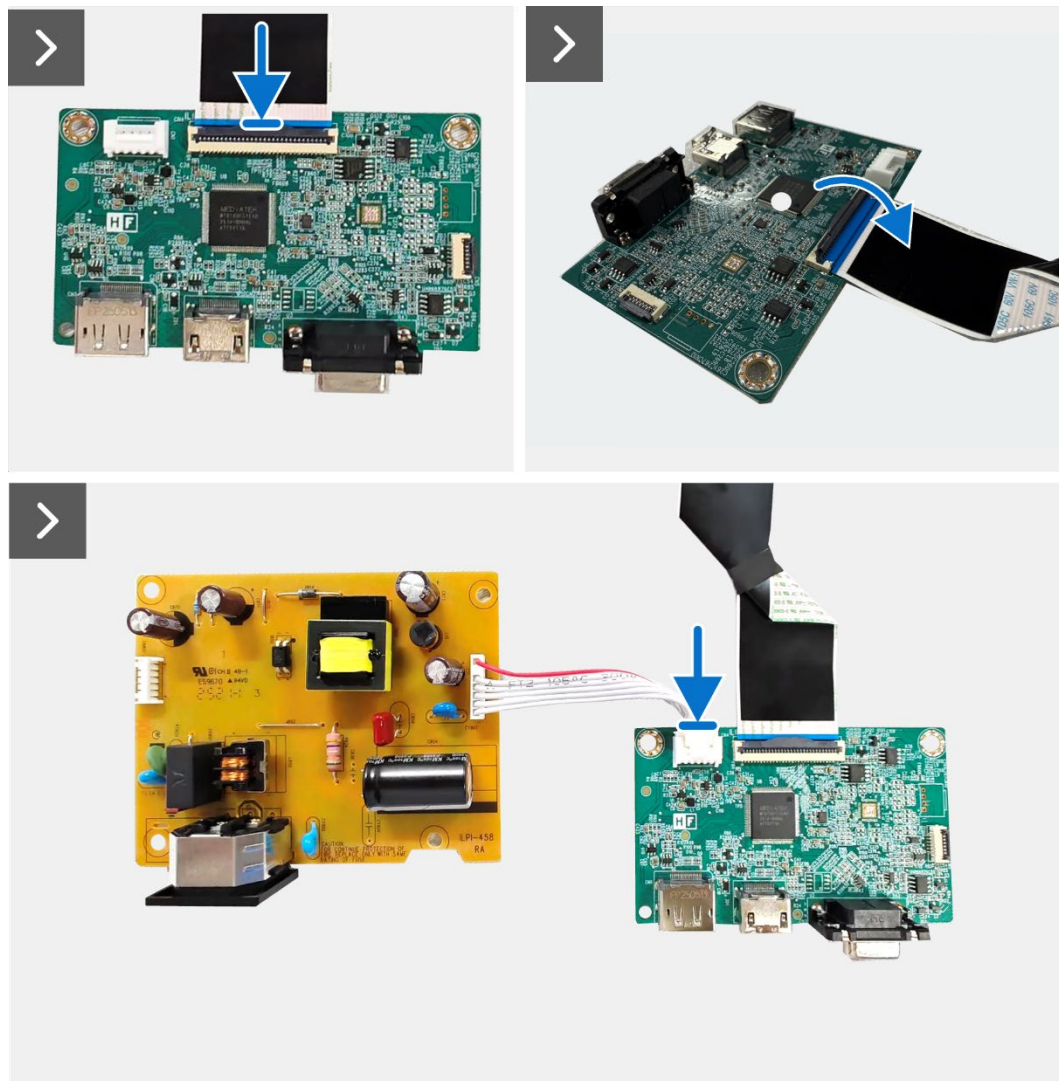


Figure 15. Installing the interface board

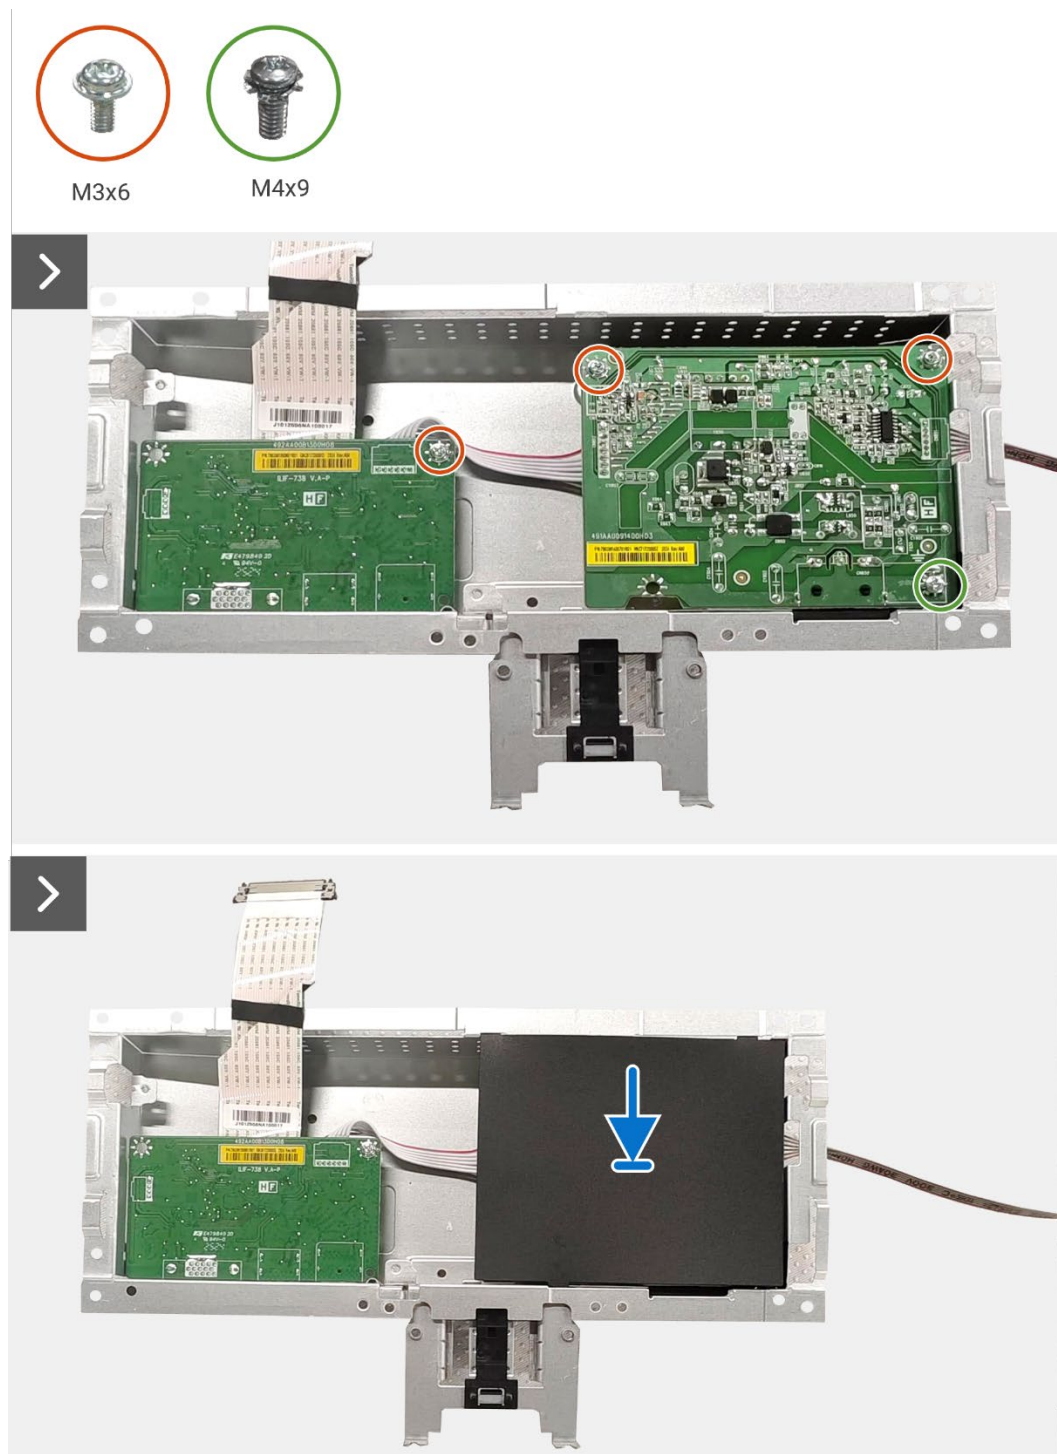


Figure 16. Installing the interface board



#4-40x11.8



Figure 17. Installing the interface board

Next steps

1. Install the [keypad board](#).
2. Install the [chassis assembly](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your monitor](#).

Power board

Removing the power board

Prerequisites

1. Follow the procedure in [Before working inside your monitor](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [chassis assembly](#).
5. Remove the [keypad board](#).
6. Remove the [interface board](#).

Steps

1. Disconnect the lightbar cable from the connector on the power board.

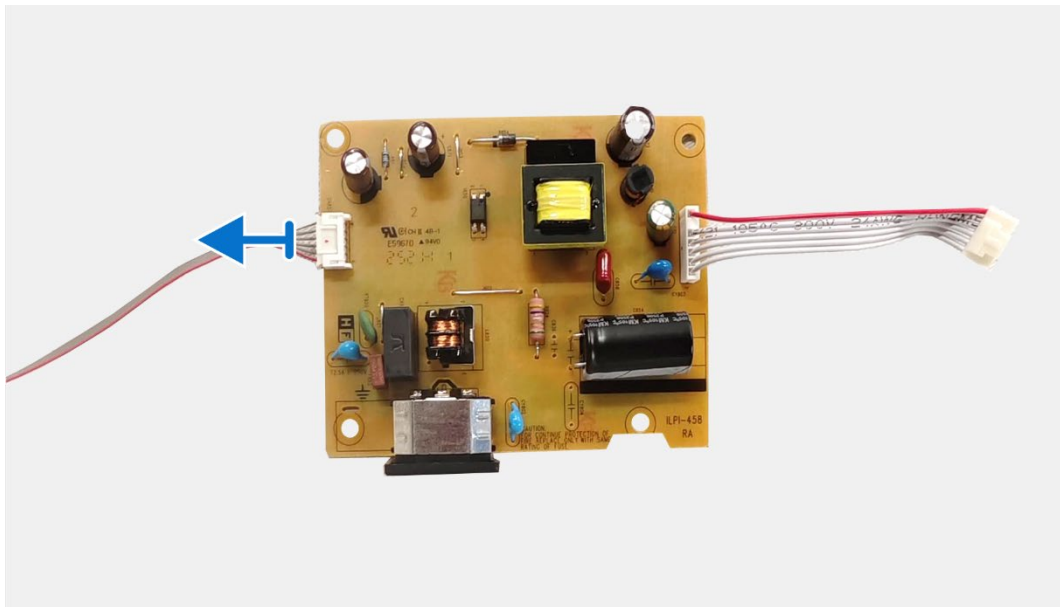


Figure 18. Removing the power board

Installing the power board

Steps

1. Connect the lightbar cable to the connector on the power board.

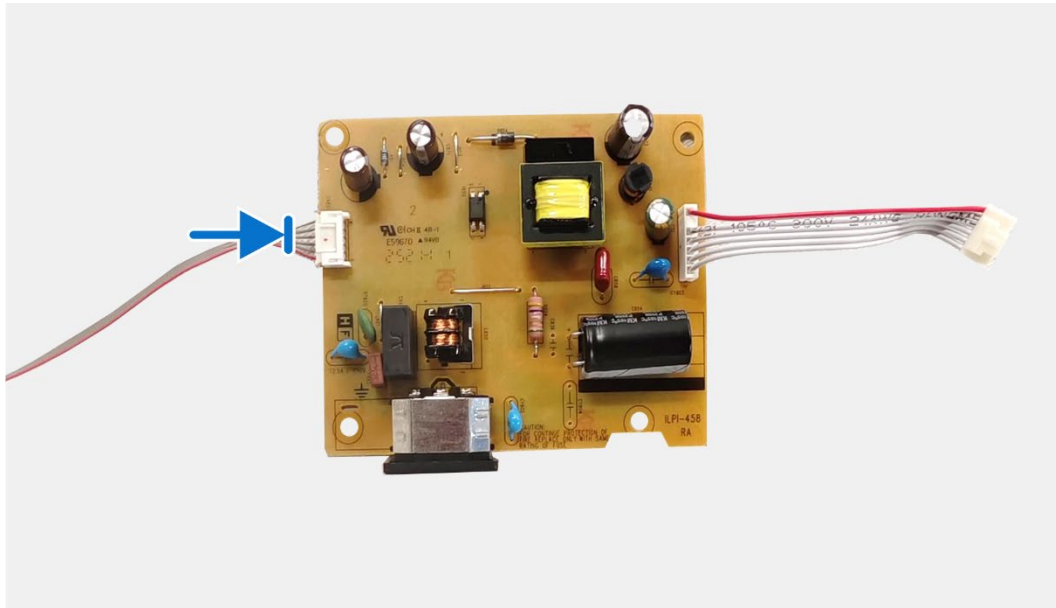


Figure 19. Installing the power board

Next steps

1. Install the [interface board](#).
2. Install the [keypad board](#).
3. Install the [chassis assembly](#).
4. Install the [back cover](#).
5. Install the [stand](#).
6. Follow the procedure in [After working inside your monitor](#).

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Contact Support at Dell Support Site](#).

NOTE: Availability varies by country or region and product, and some services may not be available in your country or region.

NOTE: If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.

Revision History

The following table provides the revision history of this document:

Table 2. Revision history.

Revision	Date	Description
A00	September 2025	Original publish date